

15.1. "H" Extension for Hypervisor Support, Version 1.0

This chapter describes the RISC-V hypervisor extension, which virtualizes the supervisor-level architecture to support the efficient hosting of guest operating systems atop a type-1 or type-2 hypervisor. The hypervisor extension changes supervisor mode into *hypervisor-extended supervisor mode* (HS-mode, or *hypervisor mode* for short), where a hypervisor or a hosting-capable operating system runs. The hypervisor extension also adds another stage of address translation, from *guest physical addresses* to supervisor physical addresses, to virtualize the memory and memory-mapped I/O subsystems for a guest operating system. HS-mode acts the same as S-mode, but with additional instructions and CSRs that control the new stage of address translation and support hosting a guest OS in virtual S-mode (VS-mode). Regular S-mode operating systems can execute without modification either in HS-mode or as VS-mode guests.

In HS-mode, an OS or hypervisor interacts with the machine through the same SBI as an OS normally does from S-mode. An HS-mode hypervisor is expected to implement the SBI for its VS-mode guest.

The hypervisor extension depends on an "I" base integer ISA with 32 `x` registers (RV32I or RV64I), not RV32E or RV64E, which have only 16 `x` registers. CSR `mtval` must not be read-only zero, and standard page-based address translation must be supported, either Sv32 for RV32, or a minimum of Sv39 for RV64.

The hypervisor extension is enabled by setting bit 7 in the `misa` CSR, which corresponds to the letter H. RISC-V harts that implement the hypervisor extension are encouraged not to hardwire `misa` [7], so that the extension may be disabled.

NOTE

The baseline privileged architecture is designed to simplify the use of classic virtualization techniques, where a guest OS is run at user-level, as the few privileged instructions can be easily detected and trapped. The hypervisor extension improves virtualization performance by reducing the frequency of these traps.

The hypervisor extension has been designed to be efficiently emulable on platforms that do not implement the extension, by running the hypervisor in S-mode and trapping into M-mode for hypervisor CSR accesses and to maintain shadow page tables. The majority of CSR accesses for type-2 hypervisors are valid S-mode accesses so need not be trapped. Hypervisors can support nested virtualization analogously.

15.1.1. Privilege Modes

The current *virtualization mode*, denoted V , indicates whether the hart is currently executing in a guest. When $V=1$, the hart is either in virtual S-mode (VS-mode), or in virtual U-mode (VU-mode) atop a guest OS running in VS-mode. When $V=0$, the hart is either in M-mode, in HS-mode, or in U-mode atop an OS running in HS-mode. The virtualization mode also indicates whether two-stage address translation is active ($V=1$) or inactive ($V=0$). Privilege modes with the hypervisor extension. lists the possible privilege modes of a RISC-V hart with the hypervisor extension.

Table 1. Privilege modes with the hypervisor extension.

Virtualization Mode (V)	Nominal Privilege	Abbreviation	Name	Two-Stage Tra
0	U	U-mode	User mode	Off
0	S	HS-mode	Hypervisor-extended supervisor mode	Off
0	M	M-mode	Machine mode	Off
1	U	VU-mode	Virtual user mode	On
1	S	VS-mode	Virtual supervisor mode	On

For privilege modes U and VU, the *nominal privilege mode* is U, and for privilege modes HS and VS, the nominal privilege mode is S.

HS-mode is more privileged than VS-mode, and VS-mode is more privileged than VU-mode. VS-mode interrupts are globally disabled when executing in U-mode.

i NOTE

This description does not consider the possibility of U-mode or VU-mode interrupts and will be revised if an extension for user-level interrupts is adopted.

15.1.2. Hypervisor and Virtual Supervisor CSRs

An OS or hypervisor running in HS-mode uses the supervisor CSRs to interact with the exception, interrupt, and address-translation subsystems. Additional CSRs are provided to HS-mode, but not to VS-mode, to manage two-stage address translation and to control the behavior of a VS-mode guest: `hstatus`, `hedeleg`, `hideleg`, `hvip`, `hip`, `hie`, `hgeip`, `hgeie`, `henvcfg`, `henvcfgh`, `hcounteren`, `htimedelta`, `htimedeltah`, `htval`, `htinst`, and `hgap`.

Furthermore, several *virtual supervisor CSRs* (VS CSRs) are replicas of the normal supervisor CSRs. For example, `vsstatus` is the VS CSR that duplicates the usual `sstatus` CSR.

When $V=1$, the VS CSRs substitute for the corresponding supervisor CSRs, taking over all functions of the usual supervisor CSRs except as specified otherwise. Instructions that normally read or modify a supervisor CSR shall instead access the corresponding VS CSR. When $V=1$, an attempt to read or write a VS CSR directly by its own separate CSR address causes a virtual-instruction exception. (Attempts from U-mode cause an illegal-instruction exception as usual.) The VS CSRs can be accessed as themselves only from M-mode or HS-mode.

While $V=1$, the normal HS-level supervisor CSRs that are replaced by VS CSRs retain their values but do not affect the behavior of the machine unless specifically documented to do so. Conversely, when

in [Encoding of MXL field in `misa`](#). In particular, an implementation may make VSXL be a read-only field whose value always ensures that VSXLEN=HSXLEN.

If HSXLEN is changed from 32 to a wider width, and if field VSXL is not restricted to a single value, it gets the value corresponding to the widest supported width not wider than the new HSXLEN.

The `hstatus` fields VTSR, VTW, and VTVM are defined analogously to the `mstatus` fields TSR, TW, and TVM, but affect execution only in VS-mode, and cause virtual-instruction exceptions instead of illegal-instruction exceptions. When VTSR=1, an attempt in VS-mode to execute SRET raises a virtual-instruction exception. When VTW=1 (and assuming `mstatus.TW=0`), an attempt in VS-mode to execute WFI raises a virtual-instruction exception if the WFI does not complete within an implementation-specific, bounded time limit. An implementation may have WFI always raise a virtual-instruction exception in VS-mode when VTW=1 (and `mstatus.TW=0`), even if there are pending globally-disabled interrupts when the instruction is executed. When VTVM=1, an attempt in VS-mode to execute SFENCE.VMA or SINVAL.VMA or to access CSR `satp` raises a virtual-instruction exception.

The VGEIN (Virtual Guest External Interrupt Number) field selects a guest external interrupt source for VS-level external interrupts. VGEIN is a **WLRL** field that must be able to hold values between zero and the maximum guest external interrupt number (known as GEILEN), inclusive. When VGEIN=0, no guest external interrupt source is selected for VS-level external interrupts. GEILEN may be zero, in which case VGEIN may be read-only zero. Guest external interrupts are explained in 15.1.2.4. Hypervisor Guest External Interrupt Registers ([hgeip](#) and [hgeie](#)), and the use of VGEIN is covered further in 15.1.2.3. Hypervisor Interrupt ([hvip](#), [hip](#), and [hie](#)) Registers.

Field HU (Hypervisor in U-mode) controls whether the virtual-machine load/store instructions, HLV, HLVX, and HSV, can be used also in U-mode. When HU=1, these instructions can be executed in U-mode the same as in HS-mode. When HU=0, all hypervisor instructions cause an illegal-instruction exception in U-mode.

NOTE

The HU bit allows a portion of a hypervisor to be run in U-mode for greater protection against software bugs, while still retaining access to a virtual machine's memory.

When Ssnpm extension is implemented, the `HUPMM` field enables or disables pointer masking (see [Pointer Masking Extensions](#)) for `HLV.*` and `HSV.*` instructions in U-mode, according to the values in Legal values of `PMM` WARL field, when their explicit memory access is performed as though in VU-mode. In HS- and M-modes, pointer masking for these instructions is enabled or disabled by `senvcfg.PMM`, when their explicit memory access is performed as though in VU-mode. Setting `henvcfg.PMM` enables or disables pointer masking for `HLV.*` and `HSV.*` when their explicit memory access is performed as though in VS-mode. When the Ssnpm extension is not implemented, the `HUPMM` field is read-only zero. The `HUPMM` field is read-only zero for RV32.

NOTE

NOTE

The hypervisor should copy the value written to `senvcfg.PMM` by the guest to the `hstatus.HUPMM` field prior to invoking `HLV.*` or `HSV.*` instructions in U-mode.

The SPV bit (Supervisor Previous Virtualization mode) is written by the implementation whenever a trap is taken into HS-mode. Just as the SPP bit in `sstatus` is set to the (nominal) privilege mode at the time of the trap, the SPV bit in `hstatus` is set to the value of the virtualization mode `V` at the time of the trap. When an SRET instruction is executed when `V=0`, `V` is set to SPV.

When `V=1` and a trap is taken into HS-mode, bit SPVP (Supervisor Previous Virtual Privilege) is set to the nominal privilege mode at the time of the trap, the same as `sstatus.SPP`. But if `V=0` before a trap, SPVP is left unchanged on trap entry. SPVP controls the effective privilege of explicit memory accesses made by the virtual-machine load/store instructions, `HLV`, `HLVX`, and `HSV`.

NOTE

Without SPVP, if instructions `HLV`, `HLVX`, and `HSV` looked instead to `sstatus.SPP` for the effective privilege of their memory accesses, then, even with `HU=1`, U-mode could not access virtual machine memory at VS-level, because to enter U-mode using SRET always leaves `SPP=0`. Unlike SPP, field SPVP is untouched by transitions back-and-forth between HS-mode and U-mode.

Field GVA (Guest Virtual Address) is written by the implementation whenever a trap is taken into HS-mode. For any trap (breakpoint, address misaligned, access fault, page fault, or guest-page fault) that writes a guest virtual address to `stval`, GVA is set to 1. For any other trap into HS-mode, GVA is set to 0.

NOTE

For breakpoint and memory access traps that write a nonzero value to `stval`, GVA is redundant with field SPV (the two bits are set the same) except when the explicit memory access of an `HLV`, `HLVX`, or `HSV` instruction causes a fault. In that case, `SPV=0` but `GVA=1`.

The VSBE bit is a **WARL** field that controls the endianness of explicit memory accesses made from VS-mode. If `VSBE=0`, explicit load and store memory accesses made from VS-mode are little-endian, and if `VSBE=1`, they are big-endian. VSBE also controls the endianness of all implicit accesses to VS-level memory management data structures, such as page tables. An implementation may make VSBE a read-only field that always specifies the same endianness as HS-mode.

15.1.2.2. Hypervisor Trap Delegation (`hedeleg` and `hideleg`) Registers

Register `hedeleg` is a 64-bit read/write register, formatted as shown in Hypervisor exception delegation register (`hedeleg`). Register `hideleg` is an HSXLEN-bit read/write register, formatted as shown in Hypervisor interrupt delegation register (`hideleg`). By default, all traps at any privilege level are handled in M-mode, though M-mode usually uses the `medeleg` and `mideleg` CSRs to delegate

some traps to HS-mode. The `hedeleg` and `hideleg` CSRs allow these traps to be further delegated to a VS-mode guest; their layout is the same as `medeleg` and `mideleg`.

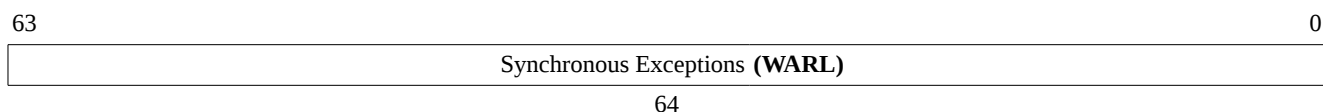


Figure 3. Hypervisor exception delegation register (`hedeleg`).

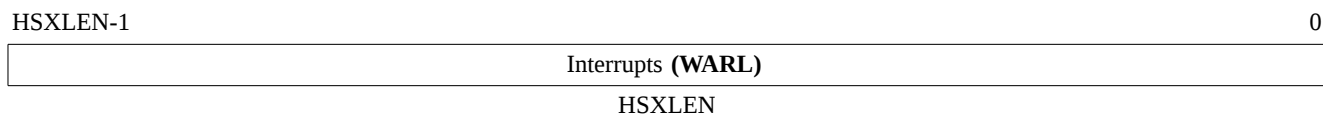


Figure 4. Hypervisor interrupt delegation register (`hideleg`).

A synchronous trap that has been delegated to HS-mode (using `medeleg`) is further delegated to VS-mode if $V=1$ before the trap and the corresponding `hedeleg` bit is set. Each bit of `hedeleg` shall be either writable or read-only zero. Many bits of `hedeleg` are required specifically to be writable or zero, as enumerated in Bits of `hedeleg` that must be writable or must be read-only zero.. Bit 0, corresponding to instruction address-misaligned exceptions, must be writable if $IALIGN=32$.

NOTE

Requiring that certain bits of `hedeleg` be writable reduces some of the burden on a hypervisor to handle variations of implementation.

When $XLEN=32$, `hedelegh` is a 32-bit read/write register that aliases bits 63:32 of `hedeleg`. Register `hedelegh` does not exist when $XLEN=64$.

An interrupt that has been delegated to HS-mode (using `mideleg`) is further delegated to VS-mode if the corresponding `hideleg` bit is set. Among bits 15:0 of `hideleg`, bits 10, 6, and 2 (corresponding to the standard VS-level interrupts) are writable, and bits 12, 9, 5, and 1 (corresponding to the standard S-level interrupts) are read-only zeros.

When a virtual supervisor external interrupt (code 10) is delegated to VS-mode, it is automatically translated by the machine into a supervisor external interrupt (code 9) for VS-mode, including the value written to `vscause` on an interrupt trap. Likewise, a virtual supervisor timer interrupt (6) is translated into a supervisor timer interrupt (5) for VS-mode, and a virtual supervisor software interrupt (2) is translated into a supervisor software interrupt (1) for VS-mode. Similar translations may or may not be done for platform interrupt causes (codes 16 and above).

Table 2. Bits of `hedeleg` that must be writable or must be read-only zero.

Bit	Attribute	Corresponding Exception
-----	-----------	-------------------------

Bit	Attribute	Corresponding Exception
0	(See text)	Instruction address misaligned
1	Writable	Instruction access fault
2	Writable	Illegal instruction
3	Writable	Breakpoint
4	Writable	Load address misaligned
5	Writable	Load access fault
6	Writable	Store/AMO address misaligned
7	Writable	Store/AMO access fault
8	Writable	Environment call from U-mode or VU-mode
9	Read-only 0	Environment call from HS-mode
10	Read-only 0	Environment call from VS-mode
11	Read-only 0	Environment call from M-mode
12	Writable	Instruction page fault
13	Writable	Load page fault
15	Writable	Store/AMO page fault
16	Read-only 0	Double trap
18	Writable	Software check
19	Writable	Hardware error
20	Read-only 0	Instruction guest-page fault
21	Read-only 0	Load guest-page fault
22	Read-only 0	Virtual instruction
23	Read-only 0	Store/AMO guest-page fault

15.1.2.3. Hypervisor Interrupt (*hvip*, *hip*, and *hie*) Registers

Register *hvip* is an HSXLEN-bit read/write register that a hypervisor can write to indicate virtual interrupts intended for VS-mode. Bits of *hvip* that are not writable are read-only zeros.

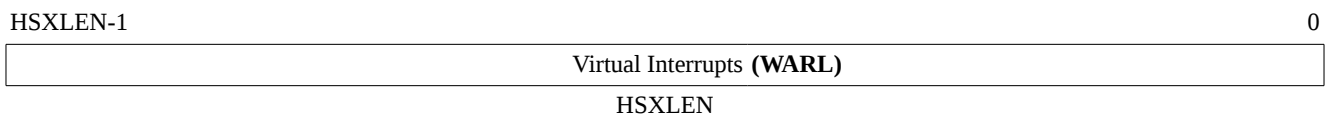


Figure 5. Hypervisor virtual-interrupt-pending register (*hvip*).

The standard portion (bits 15:0) of *hvip* is formatted as shown in Standard portion (bits 15:0) of *hvip* .. Bits VSEIP, VSTIP, and VSSIP of *hvip* are writable. Setting VSEIP=1 in *hvip* asserts a VS-level external interrupt; setting VSTIP asserts a VS-level timer interrupt; and setting VSSIP asserts a VS-level software interrupt.




Figure 6. Standard portion (bits 15:0) of *hvip*.

Registers `hip` and `hie` are HSXLEN-bit read/write registers that supplement HS-level's `sip` and `sie` respectively. The `hip` register indicates pending VS-level and hypervisor-specific interrupts, while `hie` contains enable bits for the same interrupts.

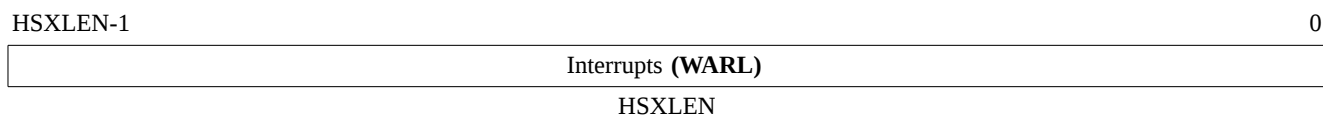


Figure 7. Hypervisor interrupt-pending register (`hip`).

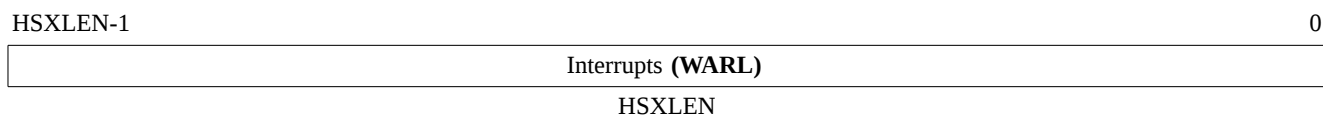


Figure 8. Hypervisor interrupt-enable register (`hie`).

For each writable bit in `sie`, the corresponding bit shall be read-only zero in both `hip` and `hie`. Hence, the nonzero bits in `sie` and `hie` are always mutually exclusive, and likewise for `sip` and `hip`.

NOTE

The active bits of `hip` and `hie` cannot be placed in HS-level's `sip` and `sie` because doing so would make it impossible for software to emulate the hypervisor extension on platforms that do not implement it in hardware.

An interrupt i will trap to HS-mode whenever all of the following are true: (a) either the current operating mode is HS-mode and the SIE bit in the `sstatus` register is set, or the current operating mode has less privilege than HS-mode; (b) bit i is set in both `sip` and `sie`, or in both `hip` and `hie`; and (c) bit i is not set in `hideleg`.

If bit i of `sie` is read-only zero, the same bit in register `hip` may be writable or may be read-only. When bit i in `hip` is writable, a pending interrupt i can be cleared by writing 0 to this bit. If interrupt i can become pending in `hip` but bit i in `hip` is read-only, then either the interrupt can be cleared by clearing bit i of `hvip`, or the implementation must provide some other mechanism for clearing the pending interrupt (which may involve a call to the execution environment).

A bit in `hie` shall be writable if the corresponding interrupt can ever become pending in `hip`. Bits of `hie` that are not writable shall be read-only zero.

The standard portions (bits 15:0) of registers `hip` and `hie` are formatted as shown in Standard portion (bits 15:0) of `hip`, and Standard portion (bits 15:0) of `hie`, respectively.




Figure 9. Standard portion (bits 15:0) of `hip`.

15	13	12	11	10	9	7	6	5	3	2	1	0
0	SGEIE	0	VSEIE	0	VSTIE	0	VSSIE	0				0
3	1	1	1	3	1	3	1	2				

Figure 10. Standard portion (bits 15:0) of `hie`.

Bits `hip`.SGEIP and `hie`.SGEIE are the interrupt-pending and interrupt-enable bits for guest external interrupts at supervisor level (HS-level). SGEIP is read-only in `hip`, and is 1 if and only if the bitwise logical-AND of CSRs `hgeip` and `hgeie` is nonzero in any bit. (See 15.1.2.4. Hypervisor Guest External Interrupt Registers (`hgeip` and `hgeie`)).

Bits `hip`.VSEIP and `hie`.VSEIE are the interrupt-pending and interrupt-enable bits for VS-level external interrupts. VSEIP is read-only in `hip`, and is the logical-OR of these interrupt sources:

- bit VSEIP of `hvip`;
- the bit of `hgeip` selected by `hstatus`.VGEIN; and
- any other platform-specific external interrupt signal directed to VS-level.

Bits `hip`.VSTIP and `hie`.VSTIE are the interrupt-pending and interrupt-enable bits for VS-level timer interrupts. VSTIP is read-only in `hip`, and is the logical-OR of `hvip`.VSTIP and, when the `Sstc` extension is implemented, the timer interrupt signal resulting from `vstimecmp`. The `hip`.VSTIP bit, in response to timer interrupts generated by `vstimecmp`, is set by writing `vstimecmp` with a value that is less than or equal to the sum of `time` and `htimedelta`, truncated to 64 bits; it is cleared by writing `vstimecmp` with a greater value. The `hip`.VSTIP bit remains defined while `V=0` as well as `V=1`.

Bits `hip`.VSSIP and `hie`.VSSIE are the interrupt-pending and interrupt-enable bits for VS-level software interrupts. VSSIP in `hip` is an alias (writable) of the same bit in `hvip`.

Multiple simultaneous interrupts destined for HS-mode are handled in the following decreasing priority order: SEI, SSI, STI, SGEI, VSEI, VSSI, VSTI, LCOFI.

15.1.2.4. Hypervisor Guest External Interrupt Registers (`hgeip` and `hgeie`)

The `hgeip` register is an HSXLEN-bit read-only register, formatted as shown in Hypervisor guest external interrupt-pending register (`hgeip`), that indicates pending guest external interrupts for this hart. The `hgeie` register is an HSXLEN-bit read/write register, formatted as shown in Hypervisor guest external interrupt-enable register (`hgeie`), that contains enable bits for the guest external interrupts at this hart. Guest external interrupt number i corresponds with bit i in both `hgeip` and `hgeie`.

HSXLEN-1		1	0
Guest External Interrupts		0	
HSXLEN		1	

Figure 11. Hypervisor guest external interrupt-pending register (`hgeip`).

HSXLEN - 1	1 0
Guest External Interrupts (WARL)	0
HSXLEN	1

Figure 12. Hypervisor guest external interrupt-enable register (*hgeie*).

Guest external interrupts represent interrupts directed to individual virtual machines at VS-level. If a RISC-V platform supports placing a physical device under the direct control of a guest OS with minimal hypervisor intervention (known as *pass-through* or *direct assignment* between a virtual machine and the physical device), then, in such circumstance, interrupts from the device are intended for a specific virtual machine. Each bit of `hgeip` summarizes *all* pending interrupts directed to one virtual hart, as collected and reported by an interrupt controller. To distinguish specific pending interrupts from multiple devices, software must query the interrupt controller.

NOTE

Support for guest external interrupts requires an interrupt controller that can collect virtual-machine-directed interrupts separately from other interrupts.

The number of bits implemented in `hgeip` and `hgeie` for guest external interrupts is UNSPECIFIED and may be zero. This number is known as *GEILEN*. The least-significant bits are implemented first, apart from bit 0. Hence, if *GEILEN* is nonzero, bits *GEILEN*:1 shall be writable in `hgeie`, and all other bit positions shall be read-only zeros in both `hgeip` and `hgeie`.

NOTE

The set of guest external interrupts received and handled at one physical hart may differ from those received at other harts. Guest external interrupt number *i* at one physical hart is typically expected not to be the same as guest external interrupt *i* at any other hart. For any one physical hart, the maximum number of virtual harts that may directly receive guest external interrupts is limited by *GEILEN*. The maximum this number can be for any implementation is 31 for RV32 and 63 for RV64, per physical hart.

A hypervisor is always free to *emulate* devices for any number of virtual harts without being limited by *GEILEN*. Only direct pass-through (direct assignment) of interrupts is affected by the *GEILEN* limit, and the limit is on the number of virtual harts receiving such interrupts, not the number of distinct interrupts received. The number of distinct interrupts a single virtual hart may receive is determined by the interrupt controller.

Register `hgeie` selects the subset of guest external interrupts that cause a supervisor-level (HS-level) guest external interrupt. The enable bits in `hgeie` do not affect the VS-level external interrupt signal selected from `hgeip` by `hstatus.VGEIN`.

15.1.2.5. Hypervisor Environment Configuration Register (*henvcfg*)

The `henvcfg` CSR is a 64-bit read/write register, formatted as shown in Hypervisor environment configuration register (`henvcfg`), that controls certain characteristics of the execution environment when virtualization mode *V*=1.

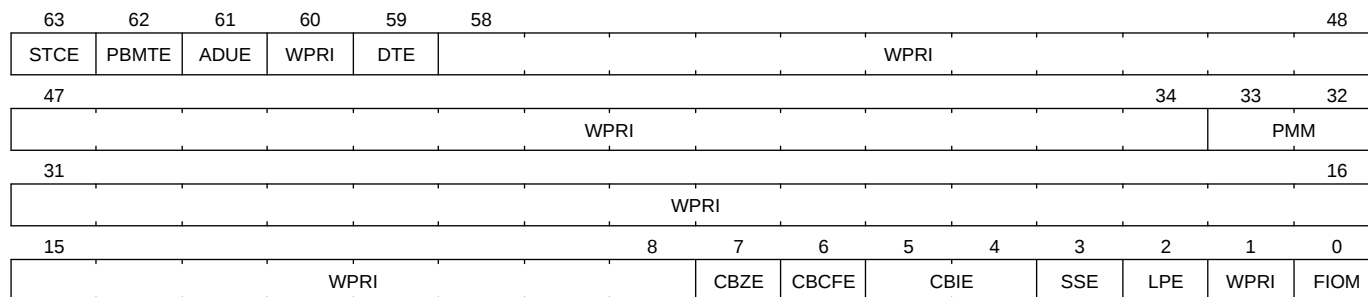


Figure 13. Hypervisor environment configuration register (*henvcfg*).

If bit FIOM (Fence of I/O implies Memory) is set to one in `henvcfg`, FENCE instructions executed when $V=1$ are modified so the requirement to order accesses to device I/O implies also the requirement to order main memory accesses. Modified interpretation of FENCE predecessor and successor sets when $FIOM=1$ and virtualization mode $V=1$. details the modified interpretation of FENCE instruction bits PI, PO, SI, and SO when $FIOM=1$ and $V=1$.

Similarly, when $FIOM=1$ and $V=1$, if an atomic instruction that accesses a region ordered as device I/O has its *aq* and/or *rl* bit set, then that instruction is ordered as though it accesses both device I/O and memory.

Table 3. Modified interpretation of FENCE predecessor and successor sets when $FIOM=1$ and virtualization mode $V=1$.

Instruction bit	Meaning when set
PI	Predecessor device input and memory reads (PR implied)
PO	Predecessor device output and memory writes (PW implied)
SI	Successor device input and memory reads (SR implied)
SO	Successor device output and memory writes (SW implied)

The PBMTE bit controls whether the Svpbmt extension is available for use in VS-stage address translation. When $PBMTE=1$, Svpbmt is available for VS-stage address translation. When $PBMTE=0$, the implementation behaves as though Svpbmt were not implemented for VS-stage address translation. If Svpbmt is not implemented, PBMTE is read-only zero.

If the Svadu extension is implemented, the ADUE bit controls whether hardware updating of PTE A/D bits is enabled for VS-stage address translation. When $ADUE=1$, hardware updating of PTE A/D bits is enabled during VS-stage address translation, and the implementation behaves as though the Svade extension were not implemented for VS-mode address translation. When $ADUE=0$, the implementation behaves as though Svade were implemented for VS-stage address translation. If Svadu is not implemented, ADUE is read-only zero.

The Sstc extension adds the `STCE` (STimecmp Enable) bit to `henvcfg` CSR. When the Sstc extension is not implemented, `STCE` is read-only zero. The `STCE` bit enables `vstimecmp` for VS-mode when set to one. When `STCE` bit is `henvcfg` is zero, an attempt to access `stimecmp` (really `vstimecmp`) when `V=1` raises a virtual-instruction exception, and `VSTIP` in `hip` reverts to its defined behavior as if this extension is not implemented.

The Zicboz extension adds the `CBZE` (Cache Block Zero instruction enable) field to `henvcfg`. The `CBZE` field applies to execution of the cache block zero instruction (`CB0.ZERO`) in privilege modes VS and VU, and only when the instruction is HS-qualified. If the instruction is not HS-qualified, it raises an illegal-instruction exception. If the instruction is HS-qualified and the `CBZE` field is set to 1, the instruction is enabled for execution; otherwise, if the `CBZE` field is set to 0, it raises a virtual-instruction exception. When the Zicboz extension is not implemented, `CBZE` is read-only zero.

The Zicbom extension adds the `CBCFE` (Cache Block Clean and Flush instruction Enable) field to `henvcfg`. When `V=1`, if the `CB0.CLEAN` and `CB0.FLUSH` instructions are not HS-qualified, they raise an illegal-instruction exception. If the instructions are HS-qualified and the `CBCFE` field is set to 1, the instructions are enabled for execution; otherwise, if the `CBCFE` field is set to 0, they raise a virtual-instruction exception. When the Zicbom extension is not implemented, `CBCFE` is read-only zero.

The Zicbom extension adds the `CBIE` (Cache Block Invalidate instruction Enable) WARL field to `henvcfg`. The `CBIE` field controls execution of the cache block invalidate instruction (`CB0.INVALID`) in privilege modes VS and VU. The encoding `10b` is reserved. When the Zicbom extension is not implemented, `CBIE` is read-only zero.

When `V=1`, if the `CB0.INVALID` instruction is not HS-qualified, it raises an illegal-instruction exception. If the instruction is HS-qualified and the `CBIE` field is set to `01b` or `11b`, the instruction is enabled for execution; otherwise, it raises a virtual-instruction exception.

If `CB0.INVALID` is enabled in HS-mode to perform a flush operation, then when the instruction is enabled in VS- or VU-mode it performs a flush operation, even if `CBIE` is set to `11b`. Otherwise, when the instruction is enabled for execution, its behavior depends on the `CBIE` encoding, as follows:

- `01b` — The instruction is executed and performs a flush operation, even if configured by VS-mode to perform an invalidate operation.
- `11b` — The instruction is executed and performs an invalidate operation, unless configured by VS-mode to perform a flush operation.

If the Ssnpm extension is implemented, the `PMM` field enables or disables pointer masking (see [Pointer Masking Extensions](#)) for VS-mode, according to the values in Legal values of `PMM` WARL field. When the Ssnpm extension is not implemented, the `PMM` field is read-only zero. The `PMM` field is read-only zero for RV32.

Table 4. Legal values of PMM WARL field

Value	Description
00	Pointer masking is disabled (PMLen = 0)
01	Reserved
10	Pointer masking is enabled with PMLen = XLEN - 57 (PMLen = 7 on RV64)
11	Pointer masking is enabled with PMLen = XLEN - 48 (PMLen = 16 on RV64)

The Zicfilp extension adds the `LPE` field in `henvcfg`. When the `LPE` field is set to 1, the Zicfilp extension is enabled in VS-mode. When the `LPE` field is 0, the Zicfilp extension is not enabled in VS-mode and the following rules apply to VS-mode:

- The hart does not update the `ELP` state; it remains as `NO_LP_EXPECTED`.
- The `LPAD` instruction operates as a no-op.

The Zicfiss extension adds the `SSE` field in `henvcfg`. If the `SSE` field is set to 1, the Zicfiss extension is activated in VS-mode. When the `SSE` field is 0, the Zicfiss extension remains inactive in VS-mode, and the following rules apply when `V=1`:

- 32-bit Zicfiss instructions will revert to their behavior as defined by Zimop.
- 16-bit Zicfiss instructions will revert to their behavior as defined by Zcmop.
- The `pte.xwr=010b` encoding in VS-stage page tables becomes reserved.
- The `senvcfg.SSE` field will read as zero and is read-only.
- When `menvcfg.SSE` is one, `SSAMOSWAP.W/D` raises a virtual-instruction exception.

The Ssdbltrp extension adds the double-trap-enable (`DTE`) field in `henvcfg`. When `henvcfg.DTE` is zero, the implementation behaves as though Ssdbltrp is not implemented for VS-mode and the `vsstatus.SDT` bit is read-only zero.

When `XLEN=32`, `henvcfg.h` is a 32-bit read/write register that aliases bits 63:32 of `henvcfg`. Register `henvcfg.h` does not exist when `XLEN=64`.

15.1.2.6. Hypervisor Counter-Enable (`hcounteren`) Register

The counter-enable register `hcounteren` is a 32-bit register that controls the availability of the hardware performance monitoring counters to the guest virtual machine.

The `htval` register is an HSXLEN-bit read/write register formatted as shown in Hypervisor trap value register (`htval`). When a trap is taken into HS-mode, `htval` is written with additional exception-specific information, alongside `stval`, to assist software in handling the trap.

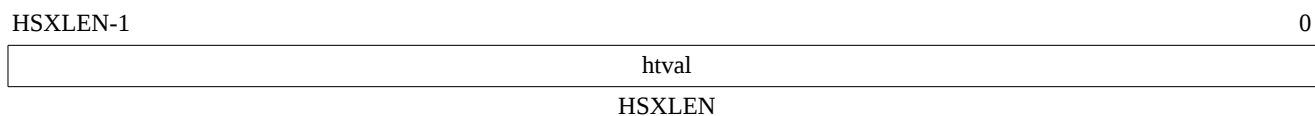


Figure 16. Hypervisor trap value register (`htval`).

When a guest-page-fault trap is taken into HS-mode, `htval` is written with either zero or the guest physical address that faulted, shifted right by 2 bits. For other traps, `htval` is set to zero, but a future standard or extension may redefine `htval`'s setting for other traps.

A guest-page fault may arise due to an implicit memory access during first-stage (VS-stage) address translation, in which case a guest physical address written to `htval` is that of the implicit memory access that faulted—for example, the address of a VS-level page table entry that could not be read. (The guest physical address corresponding to the original virtual address is unknown when VS-stage translation fails to complete.) Additional information is provided in CSR `htinst` to disambiguate such situations.

Otherwise, for misaligned loads and stores that cause guest-page faults, a nonzero guest physical address in `htval` corresponds to the faulting portion of the access as indicated by the virtual address in `stval`. For instruction guest-page faults on systems with variable-length instructions, a nonzero `htval` corresponds to the faulting portion of the instruction as indicated by the virtual address in `stval`.

NOTE

A guest physical address written to `htval` is shifted right by 2 bits to accommodate addresses wider than the current XLEN. For RV32, the hypervisor extension permits guest physical addresses as wide as 34 bits, and `htval` reports bits 33:2 of the address. This shift-by-2 encoding of guest physical addresses matches the encoding of physical addresses in PMP address registers ([Physical Memory Protection](#)) and in page table entries ([Sv32: Page-Based 32-bit Virtual-Memory Systems](#), [Sv32: Page-Based 39-bit Virtual-Memory Systems](#), [Sv48: Page-Based 48-bit Virtual-Memory Systems](#), and [xref:supervisor.adoc#sv57](#)["[Sv57: Page-Based 57-bit Virtual-Memory System](#)]).

If the least-significant two bits of a faulting guest physical address are needed, these bits are ordinarily the same as the least-significant two bits of the faulting virtual address in `stval`. For faults due to implicit memory accesses for VS-stage address translation, the least-significant two bits are instead zeros. These cases can be distinguished using the value provided in register `htinst`.

`htval` is a **WARL** register that must be able to hold zero and may be capable of holding only an arbitrary subset of other 2-bit-shifted guest physical addresses, if any.

NOTE

NOTE

Unless it has reason to assume otherwise (such as a platform standard), software that writes a value to `htval` should read back from `htval` to confirm the stored value.

15.1.2.9. Hypervisor Trap Instruction (`htinst`) Register

The `htinst` register is an HSXLEN-bit read/write register formatted as shown in Hypervisor trap instruction (`htinst`) register. When a trap is taken into HS-mode, `htinst` is written with a value that, if nonzero, provides information about the instruction that trapped, to assist software in handling the trap. The values that may be written to `htinst` on a trap are documented in 15.1.6.3. Transformed Instruction or Pseudoinstruction for `mtinst` or `htinst`.

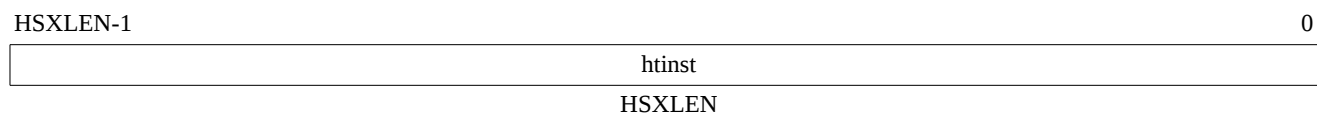


Figure 17. Hypervisor trap instruction (`htinst`) register.

`htinst` is a **WARL** register that need only be able to hold the values that the implementation may automatically write to it on a trap.

15.1.2.10. Hypervisor Guest Address Translation and Protection (`hgatp`) Register

The `hgatp` register is an HSXLEN-bit read/write register, formatted as shown in Hypervisor guest address translation and protection register `hgatp` when HSXLEN=32. for HSXLEN=32 and Hypervisor guest address translation and protection register `hgatp` when HSXLEN=64 for MODE values Bare, Sv39x4, Sv48x4, and Sv57x4. for HSXLEN=64, which controls G-stage address translation and protection, the second stage of two-stage translation for guest virtual addresses (see 15.1.5. Two-Stage Address Translation). Similar to CSR `satp`, this register holds the physical page number (PPN) of the guest-physical root page table; a virtual machine identifier (VMID), which facilitates address-translation fences on a per-virtual-machine basis; and the MODE field, which selects the address-translation scheme for guest physical addresses. When `mstatus.TVM=1`, attempts to read or write `hgatp` while executing in HS-mode will raise an illegal-instruction exception.

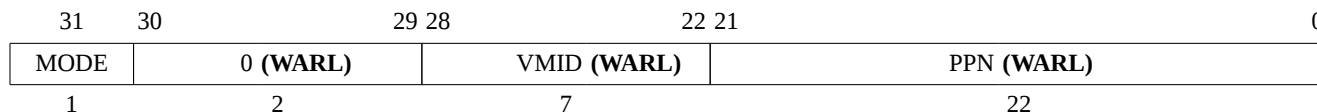


Figure 18. Hypervisor guest address translation and protection register `hgatp` when HSXLEN=32.

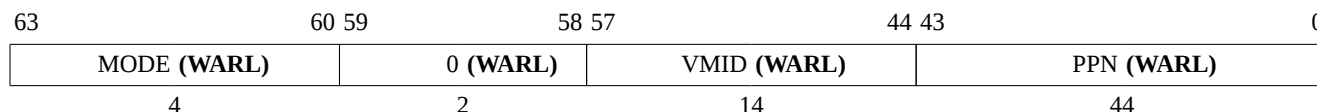


Figure 19. Hypervisor guest address translation and protection register `hgap` when `HSXLEN=64` for `MODE` values `Bare`, `Sv39x4`, `Sv48x4`, and `Sv57x4`.

Encoding of `hgap` `MODE` field. shows the encodings of the `MODE` field when `HSXLEN=32` and `HSXLEN=64`. When `MODE=Bare`, guest physical addresses are equal to supervisor physical addresses, and there is no further memory protection for a guest virtual machine beyond the physical memory protection scheme described in [Physical Memory Protection](#). In this case, software must write zero to the remaining fields in `hgap`. Attempting to select `MODE=Bare` with a nonzero pattern in the remaining fields has an UNSPECIFIED effect on the value that the remaining fields assume and an UNSPECIFIED effect on G-stage address translation and protection behavior.

When `HSXLEN=32`, the only other valid setting for `MODE` is `Sv32x4`, which is a modification of the usual `Sv32` paged virtual-memory scheme, extended to support 34-bit guest physical addresses. When `HSXLEN=64`, modes `Sv39x4`, `Sv48x4`, and `Sv57x4` are defined as modifications of the `Sv39`, `Sv48`, and `Sv57` paged virtual-memory schemes. All of these paged virtual-memory schemes are described in 15.1.5.1. Guest Physical Address Translation.

The remaining `MODE` settings when `HSXLEN=64` are reserved for future use and may define different interpretations of the other fields in `hgap`.

Table 5. Encoding of `hgap` `MODE` field.

HSXLEN=32		
Value	Name	Description
0	Bare	No translation or protection.
1	Sv32x4	Page-based 34-bit virtual addressing (2-bit extension of Sv32).
HSXLEN=64		
Value	Name	Description
0	Bare	No translation or protection.
1-7	—	Reserved
8	Sv39x4	Page-based 41-bit virtual addressing (2-bit extension of Sv39).
9	Sv48x4	Page-based 50-bit virtual addressing (2-bit extension of Sv48).
10	Sv57x4	Page-based 59-bit virtual addressing (2-bit extension of Sv57).
11-15	—	Reserved

Implementations are not required to support all defined `MODE` settings when `HSXLEN=64`.

A write to `hgap` with an unsupported `MODE` value is not ignored as it is for `satp`. Instead, the fields of `hgap` are **WARL** in the normal way, when so indicated.

As explained in 15.1.5.1. Guest Physical Address Translation, for the paged virtual-memory schemes (Sv32x4, Sv39x4, Sv48x4, and Sv57x4), the root page table is 16 KiB and must be aligned to a 16-KiB boundary. In these modes, the lowest two bits of the physical page number (PPN) in `hgap` always read as zeros. An implementation that supports only the defined paged virtual-memory schemes and/or Bare may make PPN[1:0] read-only zero.

The number of VMID bits is UNSPECIFIED and may be zero. The number of implemented VMID bits, termed *VMIDLEN*, may be determined by writing one to every bit position in the VMID field, then reading back the value in `hgap` to see which bit positions in the VMID field hold a one. The least-significant bits of VMID are implemented first: that is, if $VMIDLEN > 0$, VMID[VMIDLEN-1:0] is writable. The maximal value of VMIDLEN, termed *VMIDMAX*, is 7 for Sv32x4 or 14 for Sv39x4, Sv48x4, and Sv57x4.

The `hgap` register is considered *active* for the purposes of the address-translation algorithm *unless* the effective privilege mode is U and `hstatus.HU=0`.

NOTE

This definition simplifies the implementation of speculative execution of HLV, HLVX, and HSV instructions.

Note that writing `hgap` does not imply any ordering constraints between page-table updates and subsequent G-stage address translations. If the new virtual machine's guest physical page tables have been modified, or if a VMID is reused, it may be necessary to execute an HFENCE.GVMA instruction (see 15.1.3.2. Hypervisor Memory-Management Fence Instructions) before or after writing `hgap`.

15.1.2.11. Virtual Supervisor Status (*vsstatus*) Register

The `vsstatus` register is a VSXLEN-bit read/write register that is VS-mode's version of supervisor register `sstatus`, formatted as shown in Virtual supervisor status (*vsstatus*) register when VSXLEN=32. when VSXLEN=32 and Virtual supervisor status (*vsstatus*) register when VSXLEN=64. when VSXLEN=64. When $V=1$, `vsstatus` substitutes for the usual `sstatus`, so instructions that normally read or modify `sstatus` actually access `vsstatus` instead.



Figure 20. Virtual supervisor status (*vsstatus*) register when VSXLEN=32.

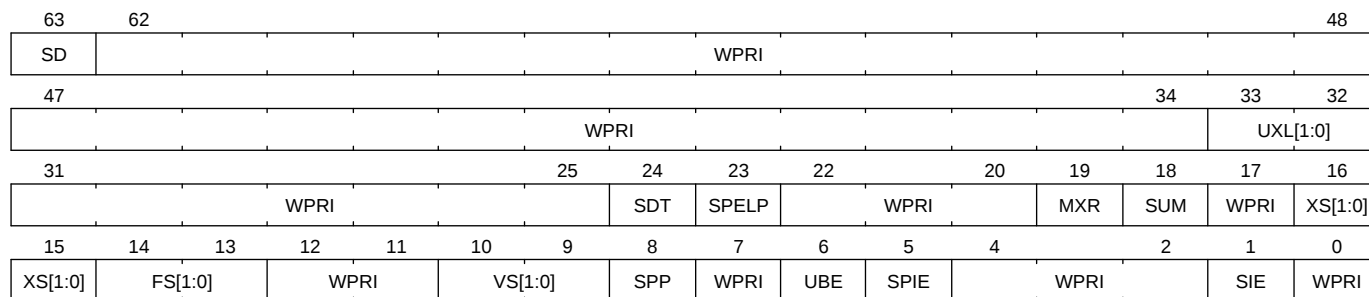


Figure 21. Virtual supervisor status (*vsstatus*) register when *VSXLEN*=64.

The UXL field controls the effective XLEN for VU-mode, which may differ from the XLEN for VS-mode (*VSXLEN*). When *VSXLEN*=32, the UXL field does not exist, and VU-mode XLEN=32. When *VSXLEN*=64, UXL is a **WARL** field that is encoded the same as the MXL field of *misa*, shown in [Encoding of MXL field in *misa*](#). In particular, an implementation may make UXL be a read-only copy of field VSXL of *hstatus*, forcing VU-mode XLEN=*VSXLEN*.

If *VSXLEN* is changed from 32 to a wider width, and if field UXL is not restricted to a single value, it gets the value corresponding to the widest supported width not wider than the new *VSXLEN*.

When *V*=1, both *vsstatus*.FS and the HS-level *sstatus*.FS are in effect. Attempts to execute a floating-point instruction when either field is 0 (Off) raise an illegal-instruction exception. Modifying the floating-point state when *V*=1 causes both fields to be set to 3 (Dirty).

NOTE

For a hypervisor to benefit from the extension context status, it must have its own copy in the HS-level *sstatus*, maintained independently of a guest OS running in VS-mode. While a version of the extension context status obviously must exist in *vsstatus* for VS-mode, a hypervisor cannot rely on this version being maintained correctly, given that VS-level software can change *vsstatus*.FS arbitrarily. If the HS-level *sstatus*.FS were not independently active and maintained by the hardware in parallel with *vsstatus*.FS while *V*=1, hypervisors would always be forced to conservatively swap all floating-point state when context-switching between virtual machines.

Similarly, when *V*=1, both *vsstatus*.VS and the HS-level *sstatus*.VS are in effect. Attempts to execute a vector instruction when either field is 0 (Off) raise an illegal-instruction exception. Modifying the vector state when *V*=1 causes both fields to be set to 3 (Dirty).

Read-only fields SD and XS summarize the extension context status as it is visible to VS-mode only. For example, the value of the HS-level *sstatus*.FS does not affect *vsstatus*.SD.

An implementation may make field UBE be a read-only copy of *hstatus*.VSBE.

When *V*=0, *vsstatus* does not directly affect the behavior of the machine, unless a virtual-machine load/store (HLV, HL VX, or HSV) or the MPRV feature in the *mstatus* register is used to execute a load or store as *though* *V*=1.

The Zicfilp extension adds the SPELP field that holds the previous ELP, and is updated as specified in [Preserving Expected Landing Pad State on Traps](#). The SPELP field is encoded as follows:

- 0 - NO_LP_EXPECTED - no landing pad instruction expected.
- 1 - LP_EXPECTED - a landing pad instruction is expected.

The Ssdbltrp adds an S-mode-disable-trap (SDT) field extension to address double trap (See [Double Trap Control in sstatus Register](#)) in VS-mode.

15.1.2.12. Virtual Supervisor Interrupt (vsip and vsie) Registers

The vsip and vsie registers are VSXLEN-bit read/write registers that are VS-mode's versions of supervisor CSRs sip and sie, formatted as shown in Virtual supervisor interrupt-pending register (vsip), and Virtual supervisor interrupt-enable register (vsie), respectively. When V=1, vsip and vsie substitute for the usual sip and sie, so instructions that normally read or modify sip/sie actually access vsip/vsie instead. However, interrupts directed to HS-level continue to be indicated in the HS-level sip register, not in vsip, when V=1.

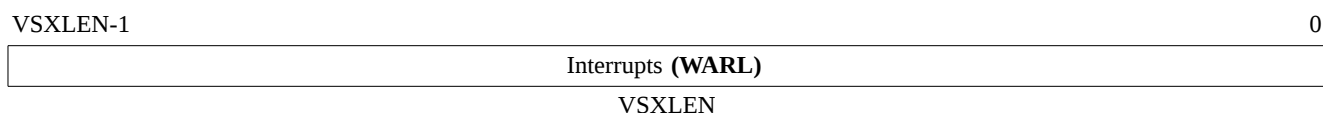


Figure 22. Virtual supervisor interrupt-pending register (vsip).

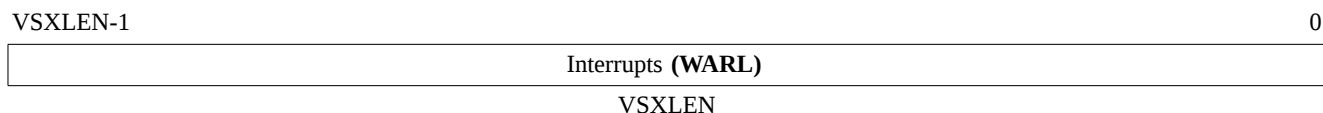


Figure 23. Virtual supervisor interrupt-enable register (vsie).

The standard portions (bits 15:0) of registers vsip and vsie are formatted as shown in Standard portion (bits 15:0) of vsip, and Standard portion (bits 15:0) of vsie, respectively.

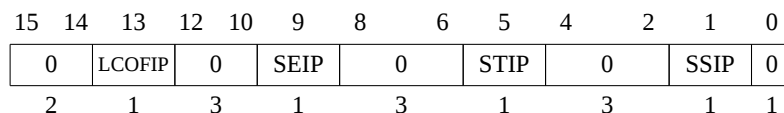


Figure 24. Standard portion (bits 15:0) of vsip.

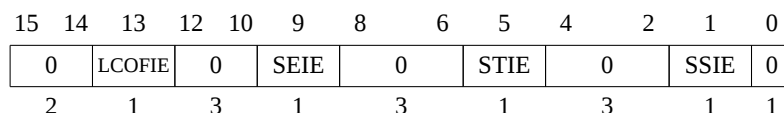


Figure 25. Standard portion (bits 15:0) of vsie.

Extension Shlcofideleg supports delegating LCOFI interrupts to VS-mode. If the Shlcofideleg extension is implemented, hideleg bit 13 is writable; otherwise, it is read-only zero. When bit 13 of hideleg is

zero, `vsip.LCOFIP` and `vsie.LCOFIE` are read-only zeros. Else, `vsip.LCOFIP` and `vsie.LCOFIE` are aliases of `sip.LCOFIP` and `sie.LCOFIE`.

When bit 10 of `hideleg` is zero, `vsip.SEIP` and `vsie.SEIE` are read-only zeros. Else, `vsip.SEIP` and `vsie.SEIE` are aliases of `hip.VSEIP` and `hie.VSEIE`.

When bit 6 of `hideleg` is zero, `vsip.STIP` and `vsie.STIE` are read-only zeros. Else, `vsip.STIP` and `vsie.STIE` are aliases of `hip.VSTIP` and `hie.VSTIE`.

When bit 2 of `hideleg` is zero, `vsip.SSIP` and `vsie.SSIE` are read-only zeros. Else, `vsip.SSIP` and `vsie.SSIE` are aliases of `hip.VSSIP` and `hie.VSSIE`.

15.1.2.13. Virtual Supervisor Trap Vector Base Address (`vstvec`) Register

The `vstvec` register is a `VSXLEN`-bit read/write register that is VS-mode's version of supervisor register `stvec`, formatted as shown in Virtual supervisor trap vector base address register `vstvec`.. When `V=1`, `vstvec` substitutes for the usual `stvec`, so instructions that normally read or modify `stvec` actually access `vstvec` instead. When `V=0`, `vstvec` does not directly affect the behavior of the machine.

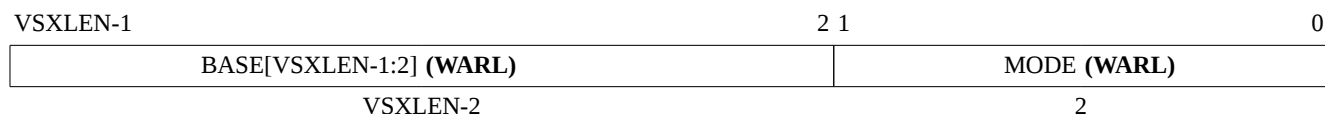


Figure 26. Virtual supervisor trap vector base address register `vstvec`.

15.1.2.14. Virtual Supervisor Scratch (`vsscratch`) Register

The `vsscratch` register is a `VSXLEN`-bit read/write register that is VS-mode's version of supervisor register `sscratch`, formatted as shown in Virtual supervisor scratch register `vsscratch`.. When `V=1`, `vsscratch` substitutes for the usual `sscratch`, so instructions that normally read or modify `sscratch` actually access `vsscratch` instead. The contents of `vsscratch` never directly affect the behavior of the machine.



Figure 27. Virtual supervisor scratch register `vsscratch`.

15.1.2.15. Virtual Supervisor Exception Program Counter (`vsepc`) Register

The `vsepc` register is a `VSXLEN`-bit read/write register that is VS-mode's version of supervisor register `sepc`, formatted as shown in Virtual supervisor exception program counter (`vsepc`).. When `V=1`,

`vsepc` substitutes for the usual `sepc`, so instructions that normally read or modify `sepc` actually access `vsepc` instead. When $V=0$, `vsepc` does not directly affect the behavior of the machine.

`vsepc` is a **WARL** register that must be able to hold the same set of values that `sepc` can hold.

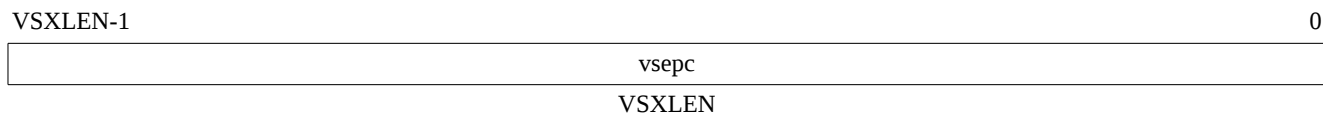


Figure 28. Virtual supervisor exception program counter (`vsepc`).

15.1.2.16. Virtual Supervisor Cause (`vscause`) Register

The `vscause` register is a VSXLEN-bit read/write register that is VS-mode's version of supervisor register `scause`, formatted as shown in Virtual supervisor cause register (`vscause`). When $V=1$, `vscause` substitutes for the usual `scause`, so instructions that normally read or modify `scause` actually access `vscause` instead. When $V=0$, `vscause` does not directly affect the behavior of the machine.

`vscause` is a **WLRL** register that must be able to hold the same set of values that `scause` can hold.

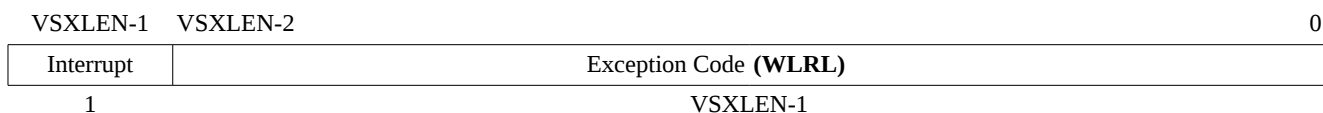


Figure 29. Virtual supervisor cause register (`vscause`).

15.1.2.17. Virtual Supervisor Trap Value (`vstval`) Register

The `vstval` register is a VSXLEN-bit read/write register that is VS-mode's version of supervisor register `stval`, formatted as shown in Virtual supervisor trap value register (`vstval`). When $V=1$, `vstval` substitutes for the usual `stval`, so instructions that normally read or modify `stval` actually access `vstval` instead. When $V=0$, `vstval` does not directly affect the behavior of the machine.

`vstval` is a **WARL** register that must be able to hold the same set of values that `stval` can hold.

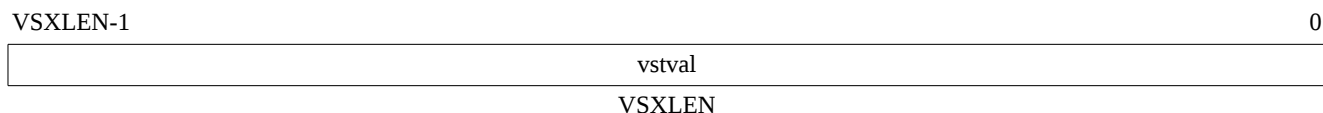


Figure 30. Virtual supervisor trap value register (`vstval`).

15.1.2.18. Virtual Supervisor Address Translation and Protection (`vsatp`) Register

The `vsatp` register is a VSXLEN-bit read/write register that is VS-mode's version of supervisor register `satp`, formatted as shown in Virtual supervisor address translation and protection `vsatp` register when VSXLEN=32. for VSXLEN=32 and Virtual supervisor address translation and protection `vsatp` register when VSXLEN=64. for VSXLEN=64. When V=1, `vsatp` substitutes for the usual `satp`, so instructions that normally read or modify `satp` actually access `vsatp` instead. `vsatp` controls VS-stage address translation, the first stage of two-stage translation for guest virtual addresses (see 15.1.5. Two-Stage Address Translation).




Figure 31. Virtual supervisor address translation and protection `vsatp` register when VSXLEN=32.




Figure 32. Virtual supervisor address translation and protection `vsatp` register when VSXLEN=64.

The `vsatp` register is considered *active* for the purposes of the address-translation algorithm *unless* the effective privilege mode is U and `hstatus.HU=0`. However, even when `vsatp` is active, VS-stage page-table entries' A bits must not be set as a result of speculative execution, unless the effective privilege mode is VS or VU.

i NOTE

In particular, virtual-machine load/store (HLV, HL VX, or HSV) instructions that are mispredicted must not cause VS-stage A bits to be set.

When V=0, a write to `vsatp` with an unsupported MODE value is either ignored as it is for `satp`, or the fields of `vsatp` are treated as **WARL** in the normal way. However, when V=1, a write to `satp` with an unsupported MODE value *is* ignored and no write to `vsatp` is effected.

When V=0, `vsatp` does not directly affect the behavior of the machine, unless a virtual-machine load/store (HLV, HL VX, or HSV) or the MPRV feature in the `mstatus` register is used to execute a load or store *as though* V=1.

15.1.2.19. Virtual Supervisor Timer (`vstimecmp`) Register

The `vstimecmp` CSR is a 64-bit register and has 64-bit precision on all RV32 and RV64 systems. In RV32 only, accesses to the `vstimecmp` CSR access the low 32 bits, while accesses to the `vstimecmph` CSR access the high 32 bits of `vstimecmp`.

A virtual supervisor timer interrupt becomes pending, as reflected in the VSTIP bit in the `hip` register, whenever $(\text{time} + \text{htimedelta})$, truncated to 64 bits, contains a value greater than or equal to `vstimecmp`, treating the values as unsigned integers. If the result of this comparison changes, it is guaranteed to be reflected in VSTIP eventually, but not necessarily immediately. The interrupt remains posted until `vstimecmp` becomes greater than $(\text{time} + \text{htimedelta})$, typically as a result of writing `vstimecmp`. The interrupt will be taken based on the standard interrupt enable and delegation rules while $V=1$.


NOTE

In systems in which a supervisor execution environment (SEE) implemented by an HS-mode hypervisor provides timer facilities via an SBI function call, this SBI call will continue to support requests to schedule a timer interrupt. The SEE will simply make use of `vstimecmp`, changing its value as appropriate. This ensures compatibility with existing guest VS-mode software that uses this SEE facility, while new VS-mode software takes advantage of `vstimecmp` directly.)

15.1.3. Hypervisor Instructions

The hypervisor extension adds virtual-machine load and store instructions and two privileged fence instructions.

15.1.3.1. Hypervisor Virtual-Machine Load and Store Instructions

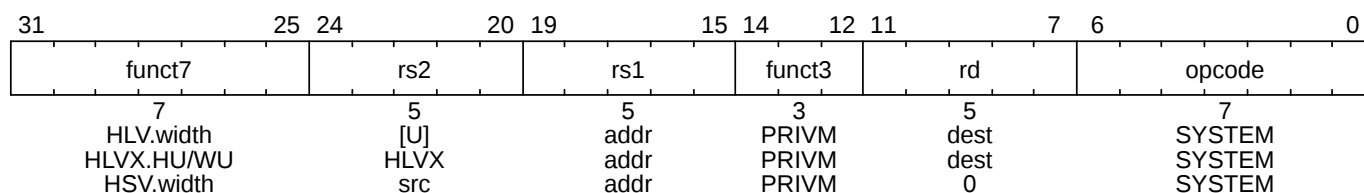

The hypervisor virtual-machine load and store instructions are valid only in M-mode or HS-mode, or in U-mode when `hstatus.HU=1`. Each instruction performs an explicit memory access with an effective privilege mode of VS or VU. The effective privilege mode of the explicit memory access is VU when `hstatus.SPVP=0`, and VS when `hstatus.SPVP=1`. As usual for VS-mode and VU-mode, two-stage address translation is applied, and the HS-level `sstatus.SUM` is ignored. HS-level `sstatus.MXR` makes execute-only pages readable by explicit loads for both stages of address translation (VS-stage and G-stage), whereas `vsstatus.MXR` affects only the first translation stage (VS-stage).

For every RV32I or RV64I load instruction, LB, LBU, LH, LHU, LW, LWU, and LD, there is a corresponding virtual-machine load instruction: HLV.B, HLV.BU, HLV.H, HLV.HU, HLV.W, HLV.WU, and HLV.D. For every RV32I or RV64I store instruction, SB, SH, SW, and SD, there is a corresponding virtual-machine store instruction: HSV.B, HSV.H, HSV.W, and HSV.D. Instructions HLV.WU, HLV.D, and HSV.D are not valid for RV32, of course.

Instructions `HLVX.HU` and `HLVX.WU` are the same as `HLV.HU` and `HLV.WU`, except that *execute* permission takes the place of *read* permission during address translation. That is, the memory being read must be executable in both stages of address translation, but read permission is not required. For the supervisor physical address that results from address translation, the supervisor physical memory attributes must grant both *execute* and *read* permissions. (The *supervisor physical memory attributes* are the machine's physical memory attributes as modified by physical memory protection, [Physical Memory Protection](#), for supervisor level.)

NOTE

`HLVX` cannot override machine-level physical memory protection (PMP), so attempting to read memory that PMP designates as execute-only still results in an access-fault exception.

Although `HLVX` instructions' explicit memory accesses require execute permissions, they still raise the same exceptions as other load instructions, rather than raising fetch exceptions instead.

`HLVX.WU` is valid for RV32, even though `LWU` and `HLV.WU` are not. (For RV32, `HLVX.WU` can be considered a variant of `HLV.W`, as sign extension is irrelevant for 32-bit values.)


The memory accesses performed by the `HLVX.*` instructions are not subject to pointer masking (see [Pointer Masking Extensions](#)).

NOTE

`HLVX.*` instructions, designed for emulating implicit access to fetch instructions from guest memory, perform memory accesses that are exempt from pointer masking to facilitate this emulation. For the same reason, pointer masking does not apply when `MXR` is set.

Attempts to execute a virtual-machine load/store instruction (`HLV`, `HLVX`, or `HSV`) when `V=1` cause a virtual-instruction exception. Attempts to execute one of these same instructions from U-mode when `hstatus.HU=0` cause an illegal-instruction exception.

15.1.3.2. Hypervisor Memory-Management Fence Instructions

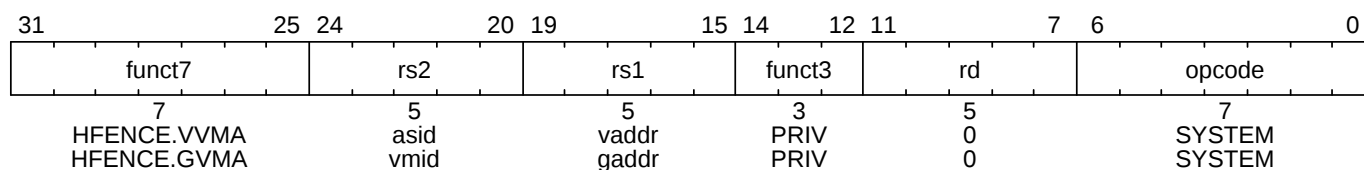

The hypervisor memory-management fence instructions, `HFENCE.VVMA` and `HFENCE.GVMA`, perform a function similar to `SFENCE.VMA` ([Supervisor Memory-Management Fence Instruction](#)), except applying to the VS-level memory-management data structures controlled by CSR `vsatp` (`HFENCE.VVMA`) or the guest-physical memory-management data structures controlled by CSR `hgatp` (`HFENCE.GVMA`). Instruction `SFENCE.VMA` applies only to the memory-management data structures controlled by the current `satp` (either the HS-level `satp` when `V=0` or `vsatp` when `V=1`).

HFENCE.VVMA is valid only in M-mode or HS-mode. Its effect is much the same as temporarily entering VS-mode and executing SFENCE.VMA. Executing an HFENCE.VVMA guarantees that any previous stores already visible to the current hart are ordered before all implicit reads by that hart done for VS-stage address translation for instructions that

- are subsequent to the HFENCE.VVMA, and
- execute when `hgap.VMID` has the same setting as it did when HFENCE.VVMA executed.

Implicit reads need not be ordered when `hgap.VMID` is different than at the time HFENCE.VVMA executed. If operand `rs1 ≠ x0`, it specifies a single guest virtual address, and if operand `rs2 ≠ x0`, it specifies a single guest address-space identifier (ASID).

NOTE

An HFENCE.VVMA instruction applies only to a single virtual machine, identified by the setting of `hgap.VMID` when HFENCE.VVMA executes.

When `rs2 ≠ x0`, bits XLEN-1:ASIDMAX of the value held in `rs2` are reserved for future standard use. Until their use is defined by a standard extension, they should be zeroed by software and ignored by current implementations. Furthermore, if `ASIDLEN < ASIDMAX`, the implementation shall ignore bits ASIDMAX-1:ASIDLEN of the value held in `rs2`.

NOTE

Simpler implementations of HFENCE.VVMA can ignore the guest virtual address in `rs1` and the guest ASID value in `rs2`, as well as `hgap.VMID`, and always perform a global fence for the VS-level memory management of all virtual machines, or even a global fence for all memory-management data structures.

Neither `mstatus.TVM` nor `hstatus.VTVM` causes HFENCE.VVMA to trap.

HFENCE.GVMA is valid only in HS-mode when `mstatus.TVM=0`, or in M-mode (irrespective of `mstatus.TVM`). Executing an HFENCE.GVMA instruction guarantees that any previous stores already visible to the current hart are ordered before all implicit reads by that hart done for G-stage address translation for instructions that follow the HFENCE.GVMA. If operand `rs1 ≠ x0`, it specifies a single guest physical address, shifted right by 2 bits, and if operand `rs2 ≠ x0`, it specifies a single virtual machine identifier (VMID).

NOTE

NOTE

Conceptually, an implementation might contain two address-translation caches: one that maps guest virtual addresses to guest physical addresses, and another that maps guest physical addresses to supervisor physical addresses. HFENCE.GVMA need not flush the former cache, but it must flush entries from the latter cache that match the HFENCE.GVMA's address and VMID arguments.

More commonly, implementations contain address-translation caches that map guest virtual addresses directly to supervisor physical addresses, removing a level of indirection. For such implementations, any entry whose guest virtual address maps to a guest physical address that matches the HFENCE.GVMA's address and VMID arguments must be flushed. Selectively flushing entries in this fashion requires tagging them with the guest physical address, which is costly, and so a common technique is to flush all entries that match the HFENCE.GVMA's VMID argument, regardless of the address argument.

Like for a guest physical address written to `htval` on a trap, a guest physical address specified in `rs1` is shifted right by 2 bits to accommodate addresses wider than the current XLEN.

When `rs2 ≠ x0`, bits XLEN-1:VMIDMAX of the value held in `rs2` are reserved for future standard use. Until their use is defined by a standard extension, they should be zeroed by software and ignored by current implementations. Furthermore, if VMIDLEN < VMIDMAX, the implementation shall ignore bits VMIDMAX-1:VMIDLEN of the value held in `rs2`.

NOTE

Simpler implementations of HFENCE.GVMA can ignore the guest physical address in `rs1` and the VMID value in `rs2` and always perform a global fence for the guest-physical memory management of all virtual machines, or even a global fence for all memory-management data structures.

If `hgatp.MODE` is changed for a given VMID, an HFENCE.GVMA with `rs1 = x0` (and `rs2` set to either `x0` or the VMID) must be executed to order subsequent guest translations with the MODE change—even if the old MODE or new MODE is Bare.

Attempts to execute HFENCE.VVMA or HFENCE.GVMA when V=1 cause a virtual-instruction exception, while attempts to do the same in U-mode cause an illegal-instruction exception. Attempting to execute HFENCE.GVMA in HS-mode when `mstatus.TVM=1` also causes an illegal-instruction exception.

15.1.4. Machine-Level CSRs

The hypervisor extension augments or modifies machine CSRs `mstatus`, `mstatush`, `mideleg`, `mip`, and `mie`, and adds CSRs `mtval2` and `mtinst`.

15.1.4.1. Machine Status (`mstatus` and `mstatush`) Registers

The hypervisor extension adds two fields, MPV and GVA, to the machine-level `mstatus` or `mstatush` CSR, and modifies the behavior of several existing `mstatus` fields. Machine status (`mstatus`) register for RV64 when the hypervisor extension is implemented. shows the modified `mstatus` register when the hypervisor extension is implemented and MXLEN=64. When MXLEN=32, the hypervisor extension adds MPV and GVA not to `mstatus` but to `mstatush`. Additional machine status (`mstatush`) register for RV32 when the hypervisor extension is implemented. The format of `mstatus` is unchanged for RV32. shows the `mstatush` register when the hypervisor extension is implemented and MXLEN=32.

63	62			40	39	38	37	36	35	34	33	32	
SD	WPRI			MPV	GVA	MBE	SBE	SXL[1:0]		UXL[1:0]			
1	23			1	1	1	1	2		2			
	31	23	22	21	20	19	18	17	16	15	14	13	
	WPRI		TSR	TW	TVM	MXR	SUM	MPRV	XS[1:0]		FS[1:0]		
	9		1	1	1	1	1	1	2		2		
	12	11	10	9	8	7	6	5	4	3	2	1	0
	MPP[1:0]	VS[1:0]	SPP	MPIE	UBE	SPIE	WPRI	MIE	WPRI	SIE	WPRI		
	2	2	1	1	1	1	1	1	1	1	1	1	

Figure 33. Machine status (`mstatus`) register for RV64 when the hypervisor extension is implemented.

31					8	7	6	5	4	3	0
WPRI						MPV	GVA	MBE	SBE	WPRI	
24						1	1	1	1	4	

Figure 34. Additional machine status (`mstatush`) register for RV32 when the hypervisor extension is implemented. The format of `mstatus` is unchanged for RV32.

The MPV bit (Machine Previous Virtualization Mode) is written by the implementation whenever a trap is taken into M-mode. Just as the MPP field is set to the (nominal) privilege mode at the time of the trap, the MPV bit is set to the value of the virtualization mode V at the time of the trap. When an MRET instruction is executed, the virtualization mode V is set to MPV, unless MPP=3, in which case V remains 0.

Field GVA (Guest Virtual Address) is written by the implementation whenever a trap is taken into M-mode. For any trap (breakpoint, address misaligned, access fault, page fault, or guest-page fault) that writes a guest virtual address to `mtva1`, GVA is set to 1. For any other trap into M-mode, GVA is set to 0.

The TSR and TVM fields of `mstatus` affect execution only in HS-mode, not in VS-mode. The TW field affects execution in all modes except M-mode.

Setting TVM=1 prevents HS-mode from accessing `hgatp` or executing `HFENCE.GVMA` or `HINVAL.GVMA`, but has no effect on accesses to `vsatp` or instructions `HFENCE.VVMA` or `HINVAL.VVMA`.

NOTE

TVM exists in `mstatus` to allow machine-level software to modify the address translations managed by a supervisor-level OS, usually for the purpose of inserting another stage of address translation below that controlled by the OS. The instruction traps enabled by TVM=1 permit machine level to co-opt both `satp` and `hgatp` and substitute *shadow page tables* that merge the OS's chosen page translations with M-level's lower-stage translations, all without the OS being aware. M-level software needs this ability not only to emulate the hypervisor extension if not already supported, but also to emulate any future RISC-V extensions that may modify or add address translation stages, perhaps, for example, to improve support for nested hypervisors, i.e., running hypervisors atop other hypervisors.

However, setting TVM=1 does not cause traps for accesses to `vsatp` or instructions `HFENCE.VVMA` or `HINVAL.VVMA`, or for any actions taken in VS-mode, because M-level software is not expected to need to involve itself in VS-stage address translation. For virtual machines, it should be sufficient, and in all likelihood faster as well, to leave VS-stage address translation alone and merge all other translation stages into G-stage shadow page tables controlled by `hgatp`. This assumption does place some constraints on possible future RISC-V extensions that current machines will be able to emulate efficiently.

The hypervisor extension changes the behavior of the Modify Privilege field, MPRV, of `mstatus`. When MPRV=0, translation and protection behave as normal. When MPRV=1, explicit memory accesses are translated and protected, and endianness is applied, as though the current virtualization mode were set to MPV and the current nominal privilege mode were set to MPP. Effect of MPRV on the translation and protection of explicit memory accesses. enumerates the cases.

Table 6. Effect of MPRV on the translation and protection of explicit memory accesses.

MPRV	MPV	MPP	Effect
0	-	-	Normal access; current privilege mode applies.
1	0	0	U-level access with HS-level translation and protection only.
1	0	1	HS-level access with HS-level translation and protection only.
1	-	3	M-level access with no translation.

MPRV	MPV	MPP	Effect
1	1	0	VU-level access with two-stage translation and protection. The HS-level MXR bit makes any executable page readable. <code>vsstatus.MXR</code> makes readable those pages marked executable at the VS translation stage, but only if readable at the guest-physical translation stage.
1	1	1	VS-level access with two-stage translation and protection. The HS-level MXR bit makes any executable page readable. <code>vsstatus.MXR</code> makes readable those pages marked executable at the VS translation stage, but only if readable at the guest-physical translation stage. <code>vsstatus.SUM</code> applies instead of the HS-level SUM bit.

MPRV does not affect the virtual-machine load/store instructions, HLV, HLVX, and HSV. The explicit loads and stores of these instructions always act as though `V=1` and the nominal privilege mode were `hstatus.SPVP`, overriding MPRV.

The `mstatus` register is a superset of the HS-level `sstatus` register but is not a superset of `vsstatus`.

15.1.4.2. Machine Interrupt Delegation (`mideleg`) Register

When the hypervisor extension is implemented, bits 10, 6, and 2 of `mideleg` (corresponding to the standard VS-level interrupts) are each read-only one. Furthermore, if any guest external interrupts are implemented (`GEILEN` is nonzero), bit 12 of `mideleg` (corresponding to supervisor-level guest external interrupts) is also read-only one. VS-level interrupts and guest external interrupts are always delegated past M-mode to HS-mode.

For bits of `mideleg` that are zero, the corresponding bits in `hideleg`, `hip`, and `hie` are read-only zeros.

15.1.4.3. Machine Interrupt (`mip` and `mie`) Registers

The hypervisor extension gives registers `mip` and `mie` additional active bits for the hypervisor-added interrupts. Standard portion (bits 15:0) of `mip` and Standard portion (bits 15:0) of `mie` show the

standard portions (bits 15:0) of registers `mip` and `mie` when the hypervisor extension is implemented.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	LCOFIP	SGEIP	MEIP	VSEIP	SEIP	0	MTIP	VSTIP	STIP	0	MSIP	VSSIP	SSIP	0	0
2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 35. Standard portion (bits 15:0) of `mip`.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	LCOFIE	SGEIE	MEIE	VSEIE	SEIE	0	MTIE	VSTIE	STIE	0	MSIE	VSSIE	SSIE	0	0
2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 36. Standard portion (bits 15:0) of `mie`.

Bits SGEIP, VSEIP, VSTIP, and VSSIP in `mip` are aliases for the same bits in hypervisor CSR `hip`, while SGEIE, VSEIE, VSTIE, and VSSIE in `mie` are aliases for the same bits in `hie`.

15.1.4.4. Machine Second Trap Value (`mtva12`) Register

The `mtva12` register is an MXLEN-bit read/write register formatted as shown in Machine second trap value register (`mtva12`). When a trap is taken into M-mode, `mtva12` is written with additional exception-specific information, alongside `mtva1`, to assist software in handling the trap.




Figure 37. Machine second trap value register (`mtva12`).

When a guest-page-fault trap is taken into M-mode, `mtva12` is written with either zero or the guest physical address that faulted, shifted right by 2 bits. For other traps, `mtva12` is set to zero, but a future standard or extension may redefine `mtva12`'s setting for other traps.

If a guest-page fault is due to an implicit memory access during first-stage (VS-stage) address translation, a guest physical address written to `mtva12` is that of the implicit memory access that faulted. Additional information is provided in CSR `mtinst` to disambiguate such situations.

Otherwise, for misaligned loads and stores that cause guest-page faults, a nonzero guest physical address in `mtva12` corresponds to the faulting portion of the access as indicated by the virtual address in `mtva1`. For instruction guest-page faults on systems with variable-length instructions, a nonzero `mtva12` corresponds to the faulting portion of the instruction as indicated by the virtual address in `mtva1`.

`mtva12` is a **WARL** register that must be able to hold zero and may be capable of holding only an arbitrary subset of other 2-bit-shifted guest physical addresses, if any.

The `Ssdbltrap` extension (See "[Ssdbltrap](#)" Double Trap Extension) requires the implementation of the `mtval2` CSR.

15.1.4.5. Machine Trap Instruction (`mtinst`) Register

The `mtinst` register is an MXLEN-bit read/write register formatted as shown in Machine trap instruction (`mtinst`) register. When a trap is taken into M-mode, `mtinst` is written with a value that, if nonzero, provides information about the instruction that trapped, to assist software in handling the trap. The values that may be written to `mtinst` on a trap are documented in 15.1.6.3. Transformed Instruction or Pseudoinstruction for `mtinst` or `htinst`.



Figure 38. Machine trap instruction (`mtinst`) register.

`mtinst` is a **WARL** register that need only be able to hold the values that the implementation may automatically write to it on a trap.

15.1.5. Two-Stage Address Translation

Whenever the current virtualization mode `V` is 1, two-stage address translation and protection is in effect. For any virtual memory access, the original virtual address is converted in the first stage by VS-level address translation, as controlled by the `vsatp` register, into a *guest physical address*. The guest physical address is then converted in the second stage by guest physical address translation, as controlled by the `hgatp` register, into a supervisor physical address. The two stages are known also as VS-stage and G-stage translation. Although there is no option to disable two-stage address translation when `V=1`, either stage of translation can be effectively disabled by zeroing the corresponding `vsatp` or `hgatp` register.

The `vsstatus` field MXR, which makes execute-only pages readable by explicit loads, only overrides VS-stage page protection. Setting MXR at VS-level does not override guest-physical page protections. Setting MXR at HS-level, however, overrides both VS-stage and G-stage execute-only permissions.

When `V=1`, memory accesses that would normally bypass address translation are subject to G-stage address translation alone. This includes memory accesses made in support of VS-stage address translation, such as reads and writes of VS-level page tables.

Machine-level physical memory protection applies to supervisor physical addresses and is in effect regardless of virtualization mode.

15.1.5.1. Guest Physical Address Translation

The mapping of guest physical addresses to supervisor physical addresses is controlled by CSR `hgap` (15.1.2.10. Hypervisor Guest Address Translation and Protection (`hgap`) Register).

When the address translation scheme selected by the `MODE` field of `hgap` is Bare, guest physical addresses are equal to supervisor physical addresses without modification, and no memory protection applies in the trivial translation of guest physical addresses to supervisor physical addresses.

When `hgap`.`MODE` specifies a translation scheme of Sv32x4, Sv39x4, Sv48x4, or Sv57x4, G-stage address translation is a variation on the usual page-based virtual address translation scheme of Sv32, Sv39, Sv48, or Sv57, respectively. In each case, the size of the incoming address is widened by 2 bits (to 34, 41, 50, or 59 bits). To accommodate the 2 extra bits, the root page table (only) is expanded by a factor of four to be 16 KiB instead of the usual 4 KiB. Matching its larger size, the root page table also must be aligned to a 16 KiB boundary instead of the usual 4 KiB page boundary. Except as noted, all other aspects of Sv32, Sv39, Sv48, or Sv57 are adopted unchanged for G-stage translation. Non-root page tables and all page table entries (PTEs) have the same formats as documented in [Sv32: Page-Based 32-bit Virtual-Memory Systems](#), [Sv39: Page-Based 39-bit Virtual-Memory Systems](#), [Sv48: Page-Based 48-bit Virtual-Memory Systems](#), and [Sv57: Page-Based 57-bit Virtual-Memory System](#).

For Sv32x4, an incoming guest physical address is partitioned into a virtual page number (VPN) and page offset as shown in Sv32x4 virtual address (guest physical address).. This partitioning is identical to that for an Sv32 virtual address as depicted in [Sv32 virtual address](#), except with 2 more bits at the high end in VPN[1]. (Note that the fields of a partitioned guest physical address also correspond one-for-one with the structure that Sv32 assigns to a physical address, depicted in [Sv32 virtual address](#).)

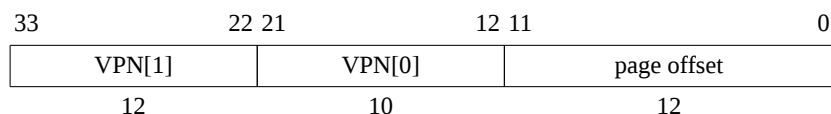


Figure 39. Sv32x4 virtual address (guest physical address).

For Sv39x4, an incoming guest physical address is partitioned as shown in Sv39x4 virtual address (guest physical address).. This partitioning is identical to that for an Sv39 virtual address as depicted in [Sv39 virtual address](#), except with 2 more bits at the high end in VPN[2]. Address bits 63:41 must all be zeros, or else a guest-page-fault exception occurs.

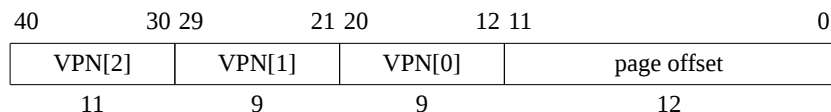


Figure 40. Sv39x4 virtual address (guest physical address).

For Sv48x4, an incoming guest physical address is partitioned as shown in Sv48x4 virtual address (guest physical address).. This partitioning is identical to that for an Sv48 virtual address as depicted in

"Sv48 virtual address, except with 2 more bits at the high end in VPN[3]. Address bits 63:50 must all be zeros, or else a guest-page-fault exception occurs.




Figure 41. Sv48x4 virtual address (guest physical address).

For Sv57x4, an incoming guest physical address is partitioned as shown in Sv57x4 virtual address (guest physical address).. This partitioning is identical to that for an Sv57 virtual address as depicted in [Sv57 virtual address](#), except with 2 more bits at the high end in VPN[4]. Address bits 63:59 must all be zeros, or else a guest-page-fault exception occurs.




Figure 42. Sv57x4 virtual address (guest physical address).

NOTE

The page-based G-stage address translation scheme for RV32, Sv32x4, is defined to support a 34-bit guest physical address so that an RV32 hypervisor need not be limited in its ability to virtualize real 32-bit RISC-V machines, even those with 33-bit or 34-bit physical addresses. This may include the possibility of a machine virtualizing itself, if it happens to use 33-bit or 34-bit physical addresses. Multiplying the size and alignment of the root page table by a factor of four is the cheapest way to extend Sv32 to cover a 34-bit address. The possible wastage of 12 KiB for an unnecessarily large root page table is expected to be of negligible consequence for most (maybe all) real uses.

A consistent ability to virtualize machines having as much as four times the physical address space as virtual address space is believed to be of some utility also for RV64. For a machine implementing 39-bit virtual addresses (Sv39), for example, this allows the hypervisor extension to support up to a 41-bit guest physical address space without either necessitating hardware support for 48-bit virtual addresses (Sv48) or falling back to emulating the larger address space using shadow page tables.

The conversion of an Sv32x4, Sv39x4, Sv48x4, or Sv57x4 guest physical address is accomplished with the same algorithm used for Sv32, Sv39, Sv48, or Sv57, as presented in [Virtual Address Translation Process](#), except that:

- `hgatp` substitutes for the usual `satp`;
- for the translation to begin, the effective privilege mode must be VS-mode or VU-mode;
- when checking the U bit, the current privilege mode is always taken to be U-mode; and
- guest-page-fault exceptions are raised instead of regular page-fault exceptions.

For G-stage address translation, all memory accesses (including those made to access data structures for VS-stage address translation) are considered to be user-level accesses, as though executed in U-mode. Access type permissions—readable, writable, or executable—are checked during G-stage translation the same as for VS-stage translation. For a memory access made to support VS-stage address translation (such as to read/write a VS-level page table), permissions and the need to set A and/or D bits at the G-stage level are checked as though for an implicit load or store, not for the original access type. However, any exception is always reported for the original access type (instruction, load, or store/AMO).

The G bit in all G-stage PTEs is currently not used. Until its use is defined by a standard extension, it should be cleared by software for forward compatibility, and must be ignored by hardware.

NOTE

G-stage address translation uses the identical format for PTEs as regular address translation, even including the U bit, due to the possibility of sharing some (or all) page tables between G-stage translation and regular HS-level address translation. Regardless of whether this usage will ever become common, we chose not to preclude it.

15.1.5.2. Guest-Page Faults

Guest-page-fault traps may be delegated from M-mode to HS-mode under the control of CSR `medeleg`, but cannot be delegated to other privilege modes. On a guest-page fault, CSR `mtval` or `stval` is written with the faulting guest virtual address as usual, and `mtval2` or `htval` is written either with zero or with the faulting guest physical address, shifted right by 2 bits. CSR `mtinst` or `htinst` may also be written with information about the faulting instruction or other reason for the access, as explained in 15.1.6.3. Transformed Instruction or Pseudoinstruction for `mtinst` or `htinst`.

When an instruction fetch or a misaligned memory access straddles a page boundary, two different address translations are involved. When a guest-page fault occurs in such a circumstance, the faulting virtual address written to `mtval` / `stval` is the same as would be required for a regular page fault. Thus, the faulting virtual address may be a page-boundary address that is higher than the instruction's original virtual address, if the byte at that page boundary is among the accessed bytes.

When a guest-page fault is not due to an implicit memory access for VS-stage address translation, a nonzero guest physical address written to `mtval2` / `htval` shall correspond to the exact virtual address written to `mtval` / `stval`.

15.1.5.3. Memory-Management Fences

The behavior of the SFENCE.VMA instruction is affected by the current virtualization mode V. When V=0, the virtual-address argument is an HS-level virtual address, and the ASID argument is an HS-level

ASID. The instruction orders stores only to HS-level address-translation structures with subsequent HS-level address translations.

When $V=1$, the virtual-address argument to SFENCE.VMA is a guest virtual address within the current virtual machine, and the ASID argument is a VS-level ASID within the current virtual machine. The current virtual machine is identified by the VMID field of CSR `hgap`, and the effective ASID can be considered to be the combination of this VMID with the VS-level ASID. The SFENCE.VMA instruction orders stores only to the VS-level address-translation structures with subsequent VS-stage address translations for the same virtual machine, i.e., only when `hgap.VMID` is the same as when the SFENCE.VMA executed.

Hypervisor instructions HFENCE.VVMA and HFENCE.GVMA provide additional memory-management fences to complement SFENCE.VMA. These instructions are described in 15.1.3.2. Hypervisor Memory-Management Fence Instructions.

Physical Memory Protection and Paging discusses the intersection between physical memory protection (PMP) and page-based address translation. It is noted there that, when PMP settings are modified in a manner that affects either the physical memory that holds page tables or the physical memory to which page tables point, M-mode software must synchronize the PMP settings with the virtual memory system. For HS-level address translation, this is accomplished by executing in M-mode an SFENCE.VMA instruction with $rs1=x0$ and $rs2=x0$, after the PMP CSRs are written. Synchronization with G-stage and VS-stage data structures is also needed. Executing an HFENCE.GVMA instruction with $rs1=x0$ and $rs2=x0$ suffices to flush all G-stage or VS-stage address-translation cache entries that have cached PMP settings corresponding to the final translated supervisor physical address. An HFENCE.VVMA instruction is not required.

Similarly, if the setting of the PBMTE or ADUE bits in `menvcfg` are changed, an HFENCE.GVMA instruction with $rs1=x0$ and $rs2=x0$ suffices to synchronize with respect to the altered interpretation of G-stage and VS-stage PTEs' PBMT and A/D bit fields, respectively.

By contrast, if the PBMTE or ADUE bits in `henvcfg` are changed, executing an HFENCE.VVMA with $rs1=x0$ and $rs2=x0$ suffices to synchronize with respect to the altered interpretation of VS-stage PTEs' PBMT and A/D bit fields for the currently active VMID.

NOTE

No mechanism is provided to atomically change `vsatp` and `hgap` together. Hence, to prevent speculative execution causing one guest's VS-stage translations to be cached under another guest's VMID, world-switch code should zero `vsatp`, then swap `hgap`, then finally write the new `vsatp` value. Similarly, if `henvcfg.PBMTE/ADUE` need be world-switched, they should be switched after zeroing `vsatp` but before writing the new `vsatp` value, obviating the need to execute an HFENCE.VVMA instruction.

15.1.5.4. Interaction with Pointer Masking

Guest physical addresses (GPAs) are 2 bits wider than the corresponding virtual address translation modes, resulting in additional address translation schemes Sv32x4, Sv39x4, Sv48x4, and Sv57x4 for translating guest physical addresses to supervisor physical addresses. When running with virtualization in VS/VU mode with `vsatp.MODE = Bare`, this means that those two bits may be subject to pointer masking, depending on `hgap.MODE` and `senvcfg.PMM / henvcfg.PMM` (for VU/VS mode). If `vsatp.MODE != BARE`, this issue does **not** apply.

i NOTE

An implementation could mask those two bits on the TLB access path, but this can have a significant timing impact. Alternatively, an implementation may choose to "waste" TLB capacity by having up to 4 duplicate entries for each page. In this case, the pointer masking operation can be applied on the TLB refill path, where it is unlikely to affect timing. To support this approach, some TLB entries need to be flushed when PMLEN changes in a way that may affect these duplicate entries.

To support implementations where (XLEN-PMLEN) can be less than the GPA width supported by `hgap.MODE`, hypervisors should execute an `HFENCE.GVMA` with `rs1 = x0` if the `henvcfg.PMM` is changed from or to a value where (XLEN-PMLEN) is less than GPA width supported by the `hgap` translation mode of that guest. Specifically, these cases are:

- `PMLEN=7` and `hgap.MODE=sv57x4`
- `PMLEN=16` and `hgap.MODE=sv57x4`
- `PMLEN=16` and `hgap.MODE=sv48x4`

Implementation of an address-specific `HFENCE.GVMA` should either ignore the address argument, or should ignore the top masked GPA bits of entries when comparing for an address match.

15.1.6. Traps

15.1.6.1. Trap Cause Codes

The hypervisor extension augments the trap cause encoding. Machine and supervisor cause register (`mcause` and `scause`) values when the hypervisor extension is implemented. lists the possible M-mode and HS-mode trap cause codes when the hypervisor extension is implemented. Codes are added for VS-level interrupts (interrupts 2, 6, 10), for supervisor-level guest external interrupts (interrupt 12), for virtual-instruction exceptions (exception 22), and for guest-page faults (exceptions 20, 21, 23). Furthermore, environment calls from VS-mode are assigned cause 10, whereas those from HS-mode or S-mode use cause 9 as usual.

Table 7. Machine and supervisor cause register (*mcause* and *scause*) values when the hypervisor extension is implemented.

Interrupt	Exception Code	Description
1	0	<i>Reserved</i>
1	1	Supervisor software interrupt
1	2	Virtual supervisor software interrupt
1	3	Machine software interrupt
1	4	<i>Reserved</i>
1	5	Supervisor timer interrupt
1	6	Virtual supervisor timer interrupt
1	7	Machine timer interrupt
1	8	<i>Reserved</i>
1	9	Supervisor external interrupt
1	10	Virtual supervisor external interrupt
1	11	Machine external interrupt
1	12	Supervisor guest external interrupt
1	13	Counter-overflow interrupt
1	14-15	<i>Reserved</i>
1	≥16	<i>Designated for platform use</i>

Interrupt	Exception Code	Description
0	0	Instruction address misaligned
0	1	Instruction access fault
0	2	Illegal instruction
0	3	Breakpoint
0	4	Load address misaligned
0	5	Load access fault
0	6	Store/AMO address misaligned
0	7	Store/AMO access fault
0	8	Environment call from U-mode or VU-mode
0	9	Environment call from HS-mode
0	10	Environment call from VS-mode
0	11	Environment call from M-mode
0	12	Instruction page fault
0	13	Load page fault
0	14	<i>Reserved</i>
0	15	Store/AMO page fault
0	16	Double trap
0	17	<i>Reserved</i>
0	18	Software check
0	19	Hardware error
0	20	Instruction guest-page fault
0	21	Load guest-page fault
0	22	Virtual instruction
0	23	Store/AMO guest-page fault
0	24-31	<i>Designated for custom use</i>
0	32-47	<i>Reserved</i>
0	48-63	<i>Designated for custom use</i>
0	≥64	<i>Reserved</i>

HS-mode and VS-mode ECALLs use different cause values so they can be delegated separately.

When $V=1$, a virtual-instruction exception (code 22) is normally raised instead of an illegal-instruction exception if the attempted instruction is *HS-qualified* but is prevented from executing when $V=1$ either due to insufficient privilege or because the instruction is expressly disabled by a supervisor or hypervisor CSR such as `scounteren` or `hcounteren`. An instruction is *HS-qualified* if it would be valid to execute in HS-mode (for some values of the instruction's register operands), assuming fields TSR and TVM of CSR `mstatus` are both zero.

A special rule applies for CSR instructions that access 32-bit high-half CSRs such as `cycleh` and `htimedeltah`. When $V=1$ and $XLEN=32$, an invalid attempt to access a high-half CSR raises a virtual-instruction exception instead of an illegal-instruction exception if the same CSR instruction for the corresponding *low-half* CSR (e.g. `cycle` or `htimedelta`) is HS-qualified.



NOTE

When $XLEN > 32$, an attempt to access a high-half CSR always raises an illegal-instruction exception.

Specifically, a virtual-instruction exception is raised for the following cases:

- in VS-mode, attempts to access a non-high-half counter CSR when the corresponding bit in `hcounteren` is 0 and the same bit in `mcounteren` is 1;
- in VS-mode, if $XLEN=32$, attempts to access a high-half counter CSR when the corresponding bit in `hcounteren` is 0 and the same bit in `mcounteren` is 1;
- in VU-mode, attempts to access a non-high-half counter CSR when the corresponding bit in either `hcounteren` or `scounteren` is 0 and the same bit in `mcounteren` is 1;
- in VU-mode, if $XLEN=32$, attempts to access a high-half counter CSR when the corresponding bit in either `hcounteren` or `scounteren` is 0 and the same bit in `mcounteren` is 1;
- in VS-mode or VU-mode, attempts to execute a hypervisor instruction (HLV, HLVX, HSV, or HFENCE);
- in VS-mode or VU-mode, attempts to access an implemented non-high-half hypervisor CSR or VS CSR when the same access (read/write) would be allowed in HS-mode, assuming `mstatus.TVM=0`;
- in VS-mode or VU-mode, if $XLEN=32$, attempts to access an implemented high-half hypervisor CSR or high-half VS CSR when the same access (read/write) to the CSR's low-half partner would be allowed in HS-mode, assuming `mstatus.TVM=0`;
- in VU-mode, attempts to execute WFI when `mstatus.TW=0`, or to execute a supervisor instruction (SRET or SFENCE);
- in VU-mode, attempts to access an implemented non-high-half supervisor CSR when the same access (read/write) would be allowed in HS-mode, assuming `mstatus.TVM=0`;
- in VU-mode, if $XLEN=32$, attempts to access an implemented high-half supervisor CSR when the same access to the CSR's low-half partner would be allowed in HS-mode, assuming `mstatus.TVM=0`;
- in VS-mode, attempts to execute WFI when `hstatus.VTW=1` and `mstatus.TW=0`, unless the instruction completes within an implementation-specific, bounded time;
- in VS-mode, attempts to execute SRET when `hstatus.VTSR=1`; and
- in VS-mode, attempts to execute an SFENCE.VMA or SINVAL.VMA instruction or to access `satp`, when `hstatus.VTVM=1`.

Other extensions to the RISC-V Privileged Architecture may add to the set of circumstances that cause a virtual-instruction exception when $V=1$.

On a virtual-instruction trap, `mtval` or `stval` is written the same as for an illegal-instruction trap.

NOTE

It is not unusual that hypervisors must emulate the instructions that raise virtual-instruction exceptions, to support nested hypervisors or for other reasons. Machine level is expected ordinarily to delegate virtual-instruction traps directly to HS-level, whereas illegal-instruction traps are likely to be processed first in M-mode before being conditionally delegated (by software) to HS-level. Consequently, virtual-instruction traps are expected typically to be handled faster than illegal-instruction traps.

When not emulating the trapping instruction, a hypervisor should convert a virtual-instruction trap into an illegal-instruction exception for the guest virtual machine.

Because TSR and TVM in `mstatus` are intended to impact only S-mode (HS-mode), they are ignored for determining exceptions in VS-mode.

Fields FS and VS in registers `sstatus` and `vsstatus` deviate from the usual *HS-qualified* rule. If an instruction is prevented from executing because FS or VS is zero in either `sstatus` or `vsstatus`, the exception raised is always an illegal-instruction exception, never a virtual-instruction exception.

NOTE

Early implementations of the H extension treated FS and VS in `sstatus` and `vsstatus` specially this way, and the behavior has been codified to maintain compatibility for software.

Table 8. Synchronous exception priority when the hypervisor extension is implemented.

Priority	Exc.Code	Description
<i>Highest</i>	3	Instruction address breakpoint
		During instruction address translation:
	12, 20, 1	First encountered page fault, guest-page fault, or access fault
		With physical address for instruction:
	1	Instruction access fault
	2	Illegal instruction
	22	Virtual instruction
	0	Instruction address misaligned
	8, 9, 10, 11	Environment call
	3	Environment break
	3	Load/store/AMO address breakpoint
		Optionally:
4, 6	Load/store/AMO address misaligned	
	During address translation for an explicit memory access:	
13, 15, 21, 23, 5, 7	First encountered page fault, guest-page fault, or access fault	
	With physical address for an explicit memory access:	
5, 7	Load/store/AMO access fault	
	If not higher priority:	
<i>Lowest</i>	4, 6	Load/store/AMO address misaligned

If an instruction may raise multiple synchronous exceptions, the decreasing priority order of Synchronous exception priority when the hypervisor extension is implemented. indicates which exception is taken and reported in `mcause` or `scause`.

15.1.6.2. Trap Entry

When a trap occurs in HS-mode or U-mode, it goes to M-mode, unless delegated by `medeleg` or `mideleg`, in which case it goes to HS-mode. When a trap occurs in VS-mode or VU-mode, it goes to M-mode, unless delegated by `medeleg` or `mideleg`, in which case it goes to HS-mode, unless further delegated by `hedeleg` or `hideleg`, in which case it goes to VS-mode.

When a trap is taken into M-mode, virtualization mode `V` gets set to 0, and fields `MPV` and `MPP` in `mstatus` (or `mstatush`) are set according to Value of `mstatus` / `mstatush` fields `MPV` and `MPP` after a trap into M-mode. Upon trap return, `MPV` is ignored when `MPP=3`.. A trap into M-mode also

writes fields GVA, MPIE, and MIE in `mstatus / mstatush` and writes CSRs `mepc`, `mcause`, `mtval`, `mtval2`, and `mtinst`.

Table 9. Value of `mstatus/mstatush` fields MPV and MPP after a trap into M-mode. Upon trap return, MPV is ignored when MPP=3.

Previous Mode	MPV	MPP
U-mode	0	0
HS-mode	0	1
M-mode	0	3
VU-mode	1	0
VS-mode	1	1

When a trap is taken into HS-mode, virtualization mode V is set to 0, and `hstatus.SPVP` and `sstatus.SPP` are set according to Value of `hstatus` field SPV and `sstatus` field SPP after a trap into HS-mode.. If V was 1 before the trap, field SPVP in `hstatus` is set the same as `sstatus.SPP`; otherwise, SPVP is left unchanged. A trap into HS-mode also writes field GVA in `hstatus`, fields SPIE and SIE in `sstatus`, and CSRs `sepc`, `scause`, `stval`, `htval`, and `htinst`.

Table 10. Value of `hstatus` field SPV and `sstatus` field SPP after a trap into HS-mode.

Previous Mode	SPV	SPP
U-mode	0	0
HS-mode	0	1
VU-mode	1	0
VS-mode	1	1

When a trap is taken into VS-mode, `vsstatus.SPP` is set according to Value of `vsstatus` field SPP after a trap into VS-mode.. Register `hstatus` and the HS-level `sstatus` are not modified, and the virtualization mode V remains 1. A trap into VS-mode also writes fields SPIE and SIE in `vsstatus` and writes CSRs `vsepc`, `vscause`, and `vstval`.

Table 11. Value of `vsstatus` field SPP after a trap into VS-mode.

Previous Mode	SPP
VU-mode	0
VS-mode	1

15.1.6.3. Transformed Instruction or Pseudoinstruction for `mtinst` or `htinst`

On any trap into M-mode or HS-mode, one of these values is written automatically into the appropriate trap instruction CSR, `mtinst` or `htinst`:

- zero;
- a transformation of the trapping instruction;
- a custom value (allowed only if the trapping instruction is non-standard); or
- a special pseudoinstruction.

Except when a pseudoinstruction value is required (described later), the value written to `mtinst` or `htinst` may always be zero, indicating that the hardware is providing no information in the register for this particular trap.

NOTE

The value written to the trap instruction CSR serves two purposes. The first is to improve the speed of instruction emulation in a trap handler, partly by allowing the handler to skip loading the trapping instruction from memory, and partly by obviating some of the work of decoding and executing the instruction. The second purpose is to supply, via pseudoinstructions, additional information about guest-page-fault exceptions caused by implicit memory accesses done for VS-stage address translation.

A *transformation* of the trapping instruction is written instead of simply a copy of the original instruction in order to minimize the burden for hardware yet still provide to a trap handler the information needed to emulate the instruction. An implementation may at any time reduce its effort by substituting zero in place of the transformed instruction.

On an interrupt, the value written to the trap instruction register is always zero. On a synchronous exception, if a nonzero value is written, one of the following shall be true about the value:

- Bit 0 is `1`, and replacing bit 1 with `1` makes the value into a valid encoding of a standard instruction.

In this case, the instruction that trapped is the same kind as indicated by the register value, and the register value is the transformation of the trapping instruction, as defined later. For example, if bits 1:0 are binary `11` and the register value is the encoding of a standard LW (load word) instruction, then the trapping instruction is LW, and the register value is the transformation of the trapping LW instruction.

- Bit 0 is `1`, and replacing bit 1 with `1` makes the value into an instruction encoding that is explicitly designated for a custom instruction (*not* an unused reserved encoding).

This is a *custom value*. The instruction that trapped is a non-standard instruction. The interpretation of a custom value is not otherwise specified by this standard.

- The value is one of the special pseudoinstructions defined later, all of which have bits 1:0 equal to `00`.

These three cases exclude a large number of other possible values, such as all those having bits 1:0 equal to binary `10`. A future standard or extension may define additional cases, thus allowing values that are currently excluded. Software may safely treat an unrecognized value in a trap instruction register the same as zero.

NOTE

To be forward-compatible with future revisions of this standard, software that interprets a nonzero value from `mtinst` or `htinst` must fully verify that the value conforms to one of the cases listed above. For instance, for RV64, discovering that bits 6:0 of `mtinst` are `0000011` and bits 14:12 are `010` is not sufficient to establish that the first case applies and the trapping instruction is a standard LW instruction; rather, software must also confirm that bits 63:32 of `mtinst` are all zeros. A future standard might define new values for 64-bit `mtinst` that are nonzero in bits 63:32 yet may coincidentally have in bits 31:0 the same bit patterns as standard RV64 instructions.

Unlike for standard instructions, there is no requirement that the instruction encoding of a custom value be of the same "kind" as the instruction that trapped (or even have any correlation with the trapping instruction).

Values that may be automatically written to the trap instruction (`mtinst` or `htinst`) register on an exception trap. shows the values that may be automatically written to the trap instruction register for each standard exception cause. For exceptions that prevent the fetching of an instruction, only zero or a pseudoinstruction value may be written. A custom value may be automatically written only if the instruction that traps is non-standard. A future standard or extension may permit other values to be written, chosen from the set of allowed values established earlier.

Table 12. Values that may be automatically written to the trap instruction (*mtinst* or *htinst*) register on an excep

Exception	Zero	Transformed		Pseudoinstr Value
		Standard Instruction	Custom Value	
Instruction address misaligned	Yes	No	Yes	No
Instruction access fault	Yes	No	No	No
Illegal instruction	Yes	No	No	No
Breakpoint	Yes	No	Yes	No
Virtual instruction	Yes	No	Yes	No
Load address misaligned	Yes Yes	Yes Yes	Yes Yes	No No
Load access fault	Yes	Yes	Yes	No
Store/AMO address misaligned	Yes	Yes	Yes	No
Store/AMO access fault				
Environment call	Yes	No	Yes	No
Instruction page fault	Yes	No	No	No
Load page fault	Yes	Yes	Yes	No
Store/AMO page fault	Yes	Yes	Yes	No
Instruction guest-page fault	Yes Yes	No Yes	No Yes	Yes Yes
Load guest-page fault	Yes	Yes	Yes	Yes
Store/AMO guest-page fault				

As enumerated in the table, a synchronous exception may write to the trap instruction register a standard transformation of the trapping instruction only for exceptions that arise from explicit memory accesses (from loads, stores, and AMO instructions). Accordingly, standard transformations are currently defined only for these memory-access instructions. If a synchronous trap occurs for a standard instruction for which no transformation has been defined, the trap instruction register shall be written with zero (or, under certain circumstances, with a special pseudoinstruction value).

For a standard load instruction that is not a compressed instruction and is one of LB, LBU, LH, LHU, LW, LWU, LD, FLW, FLD, FLQ, or FLH, the transformed instruction has the format shown in Transformed load instruction (LB, LBU, LH, LHU, LW, LWU, LD, FLW, FLD, FLQ, or FLH). Fields *funct3*, *rd*, and *opcode* are the same as the trapping load instruction..

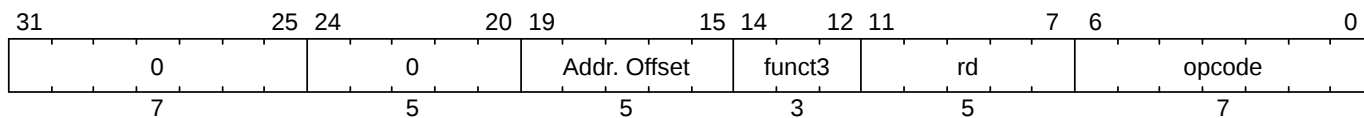


Figure 43. Transformed load instruction (LB, LBU, LH, LHU, LW, LWU, LD, FLW, FLD, FLQ, or FLH). Fields *funct3*, *rd*, and *opcode* are the same as the trapping load instruction.

For a standard store instruction that is not a compressed instruction and is one of SB, SH, SW, SD, FSW, FSD, FSQ, or FSH, the transformed instruction has the format shown in Transformed store instruction (SB, SH, SW, SD, FSW, FSD, FSQ, or FSH). Fields *rs2*, *funct3*, and *opcode* are the same as the trapping store instruction..

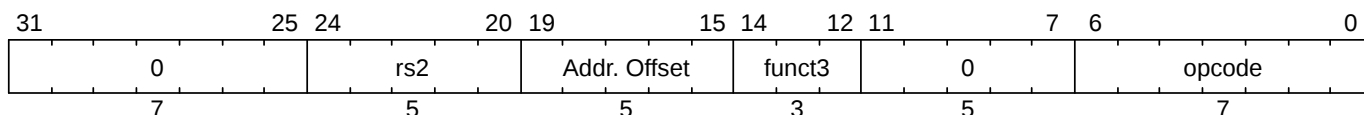


Figure 44. Transformed store instruction (SB, SH, SW, SD, FSW, FSD, FSQ, or FSH). Fields *rs2*, *funct3*, and *opcode* are the same as the trapping store instruction.

For a standard atomic instruction (load-reserved, store-conditional, or AMO instruction), the transformed instruction has the format shown in Transformed atomic instruction (load-reserved, store-conditional, or AMO instruction). All fields are the same as the trapping instruction except bits 19:15, *Addr. Offset*..

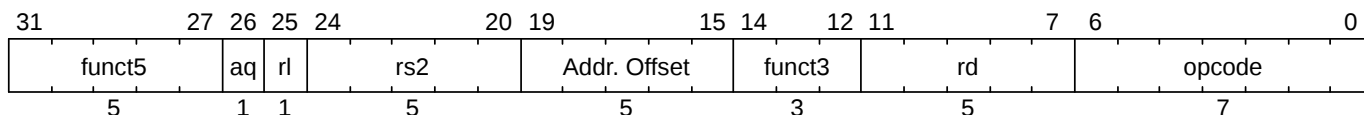


Figure 45. Transformed atomic instruction (load-reserved, store-conditional, or AMO instruction). All fields are the same as the trapping instruction except bits 19:15, *Addr. Offset*.

For a standard virtual-machine load/store instruction (HLV, HLVX, or HSV), the transformed instruction has the format shown in Transformed virtual-machine load/store instruction (HLV, HLVX, HSV). All fields are the same as the trapping instruction except bits 19:15, *Addr. Offset*.

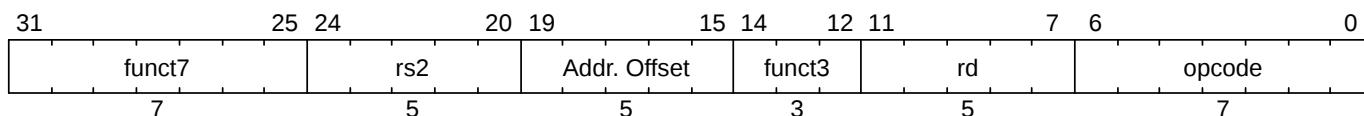


Figure 46. Transformed virtual-machine load/store instruction (HLV, HLVX, HSV). All fields are the same as the trapping instruction except bits 19:15, *Addr. Offset*

In all the transformed instructions above, the *Addr. Offset* field that replaces the instruction's *rs1* field in bits 19:15 is the positive difference between the faulting virtual address (written to `mtval` or `stval`) and the original virtual address. This difference can be nonzero only for a misaligned memory access. Note also that, for basic loads and stores, the transformations replace the instruction's immediate offset fields with zero.

For a standard compressed instruction (16-bit size), the transformed instruction is found as follows:

1. Expand the compressed instruction to its 32-bit equivalent.
2. Transform the 32-bit equivalent instruction.
3. Replace bit 1 with a 0.

Bits 1:0 of a transformed standard instruction will be binary 01 if the trapping instruction is compressed and 11 if not.

i NOTE

In decoding the contents of `mtinst` or `htinst`, once software has determined that the register contains the encoding of a standard basic load (LB, LBU, LH, LHU, LW, LWU, LD, FLW, FLD, FLQ, or FLH) or basic store (SB, SH, SW, SD, FSW, FSD, FSQ, or FSH), it is not necessary to confirm also that the immediate offset fields (31:25, and 24:20 or 11:7) are zeros. The knowledge that the register's value is the encoding of a basic load/store is sufficient to prove that the trapping instruction is of the same kind.

A future version of this standard may add information to the fields that are currently zeros. However, for backwards compatibility, any such information will be for performance purposes only and can safely be ignored.

For guest-page faults, the trap instruction register is written with a special pseudoinstruction value if: (a) the fault is caused by an implicit memory access for VS-stage address translation, and (b) a nonzero value (the faulting guest physical address) is written to `mtval2` or `htval1`. If both conditions are met, the value written to `mtinst` or `htinst` must be taken from Special pseudoinstruction values for guest-page faults. The RV32 values are used when VSXLEN=32, and the RV64 values when VSXLEN=64.; zero is not allowed.

Table 13. Special pseudoinstruction values for guest-page faults. The RV32 values are used when VSXLEN=32, and the RV64 values when VSXLEN=64.

Value	Meaning
0x00002000	32-bit read for VS-stage address translation (RV32)
0x00002020	32-bit write for VS-stage address translation (RV32)
0x00003000	64-bit read for VS-stage address translation (RV64)
0x00003020	64-bit write for VS-stage address translation (RV64)

The defined pseudoinstruction values are designed to correspond closely with the encodings of basic loads and stores, as illustrated by Standard instructions corresponding to the special pseudoinstructions of [pseudoinsts].

Table 14. Standard instructions corresponding to the special pseudoinstructions of [pseudoinsts].

Encoding	Instruction
0x00002003	lw x0, 0(x0)
0x00002023	sw x0, 0(x0)
0x00003003	ld x0, 0(x0)
0x00003023	sd x0, 0(x0)

A *write* pseudoinstruction (0x00002020 or 0x00003020) is used for the case that the machine is attempting automatically to update bits A and/or D in VS-level page tables. All other implicit memory accesses for VS-stage address translation will be reads. If a machine never automatically updates bits A or D in VS-level page tables (leaving this to software), the *write* case will never arise. The fact that such a page table update must actually be atomic, not just a simple write, is ignored for the pseudoinstruction.

NOTE

If the conditions that necessitate a pseudoinstruction value can ever occur for M-mode, then `mtinst` cannot be entirely read-only zero; and likewise for HS-mode and `htinst`. However, in that case, the trap instruction registers may minimally support only values 0 and 0x00002000 or 0x00003000, and possibly 0x00002020 or 0x00003020, requiring as few as one or two flip-flops in hardware, per register.

There is no harm here in ignoring the atomicity requirement for page table updates, because a hypervisor is not expected in these circumstances to emulate an implicit memory access that fails. Rather, the hypervisor is given enough information about the faulting access to be able to make the memory accessible (e.g. by restoring a missing page of virtual memory) before resuming execution by retrying the faulting instruction.

15.1.6.4. Trap Return

The MRET instruction is used to return from a trap taken into M-mode. MRET first determines what the new privilege mode will be according to the values of MPP and MPV in `mstatus` or `mstatush`, as encoded in Value of `mstatus` / `mstatush` fields MPV and MPP after a trap into M-mode. Upon trap return, MPV is ignored when MPP=3.. MRET then in `mstatus` / `mstatush` sets MPV=0, MPP=0, MIE=MPIE, and MPIE=1. Lastly, MRET sets the privilege mode as previously determined, and sets `pc = mepc`.

The SRET instruction is used to return from a trap taken into HS-mode or VS-mode. Its behavior depends on the current virtualization mode.

When executed in M-mode or HS-mode (i.e., V=0), SRET first determines what the new privilege mode will be according to the values in `hstatus`.SPV and `sstatus`.SPP, as encoded in Value of `hstatus` field SPV and `sstatus` field SPP after a trap into HS-mode.. SRET then sets `hstatus`.SPV=0, and in

`sstatus` sets `SPP=0`, `SIE=SPIE`, and `SPIE=1`. Lastly, `SRET` sets the privilege mode as previously determined, and sets `pc = sepc`.

When executed in VS-mode (i.e., `V=1`), `SRET` sets the privilege mode according to Value of `vsstatus` field `SPP` after a trap into VS-mode., in `vsstatus` sets `SPP=0`, `SIE=SPIE`, and `SPIE=1`, and lastly sets `pc = vsepc`.

If the `Ssdbltrp` extension is implemented, when `SRET` is executed in HS-mode, if the new privilege mode is VU, the `SRET` instruction sets `vsstatus.SDT` to 0. When executed in VS-mode, `vsstatus.SDT` is set to 0.

riscv.org[Technical Wiki](#)[Code of Conduct](#)[Privacy Policy](#)[Join RISC-V](#)

Copyright © RISC-V International®. All rights reserved. RISC-V, RISC-V International, and the RISC-V logos are trademarks of RISC-V International.

